


System Component

Operating Instructions

Model No. **SC-EH780**
SC-EH680
SC-EH580

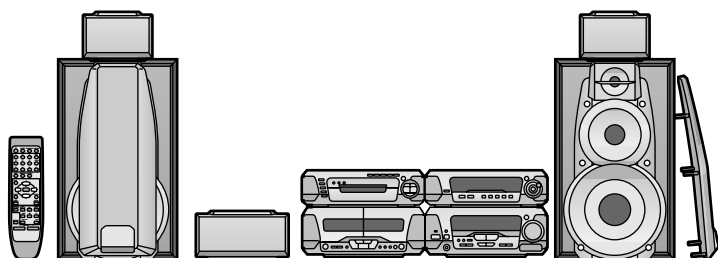

The illustration shows SC-EH780 for the United Kingdom and Eastern Europe.

COMPACT
disc
DIGITAL AUDIO

Technics®

Note

"EB" on the outer packaging indicates the United Kingdom.

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

EB EP EE GN

RQT6301-B

Dear customer

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.

These operating instructions are applicable to the following systems.
These operating instructions, however, fundamentally explain the operation of system SC-EH780.

EH780 indicates a function which can be enjoyed with SC-EH780 only.

EH680 indicates a function which can be enjoyed with SC-EH680 only.


EH580 indicates a function which can be enjoyed with SC-EH580 only.

System	SC-EH780	SC-EH680	SC-EH580
Sound processor	SH-EH780	SH-EH680	SH-EH580
Tuner / amplifier	SA-EH780	SA-EH680	SA-EH580
CD changer	SL-EH780	—	—
CD player	—	SL-EH680	SL-EH680
Cassette deck	RS-DV280	RS-DV280	RS-DV280
Speakers	Front	SB-DV280	SB-EH680
	Center	SB-PC95	SB-PC94
	Surround	SB-PS95	SB-PS95

CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**CLASS 1
LASER PRODUCT**

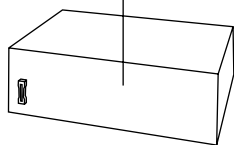

CD changer or CD player
(Back of product)

DANGER	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UD AF FUNKTION. UNDGÅ UDSTRÆLSELSE FOR STRÅLING.
VARO!	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING	ÖSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

(Inside of product)

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

 
 
THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

Supplied accessories



Please check and identify the supplied accessories.
Use numbers indicated in parentheses when asking for replacement parts.

- ☐ **AC mains lead** 1 pc.
For the United Kingdom (RJA0053-3X) For Australia and N.Z. (RJA0035-2X)




For Eastern Europe (RJA0019-2X)



Note



The included AC mains lead is for use with this unit only. Do not use it with other equipment.

- ☐ **Remote control** 1 pc.
EH780 for the United Kingdom and Eastern Europe (EUR7702050) **EH780** for Australia and N.Z. (EUR7702060)

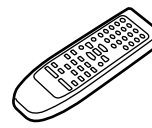


EH680
(EUR7702170)


EH580
(EUR7702070)

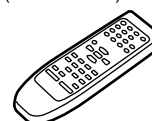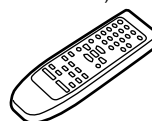


- ☐ **Remote control batteries** 2 pcs.

 

 - ☐ **FM indoor antenna** 1 pc.
For the United Kingdom and Eastern Europe (RSA0007) For Australia and N.Z. (RSA0006-J)



 - ☐ **AM loop antenna set** 1 set
(RSA0022-L)



- ☐ **Speaker leads**
(REE1057) 2 pcs. (REE0853) 2 pcs.

(Red/Black)



EH780 **EH580**
(Gray/Blue)



- ☐ **Antenna plug adaptor** 1 pc.
Only for the United Kingdom (SJP9009)



Table of contents

Before use

Safety precautions	3
Caution for AC Mains Lead	4

Simple set-up and play

Locating	5
Speaker leads	6
Antennas	7
Flat cables and AC mains lead	7
Listening to a CD	8

Control guide and preparatory steps

Front panel controls	10
The remote control	12
Turning DEMO off	13
Setting the time	13

Basic operations

CDs	14
The radio: manual tuning	17
The radio: preset tuning	18
Cassette tapes	19

Changing sound field and quality

Boosting the super woofer	20
Using the super sound equalizer	20
Changing sound field and quality	20
Using the acoustic image equalizer (AI EQ)	21
Using the manual equalizer (M.EQ)	22
Enjoying surround sound	23
6CH DISCRETE INPUT	24
DOLBY PRO LOGIC	24
SUPER SURROUND	24
Surround effects	26

Recording operations

Before recording (Deck 2 only)	28
Recording CDs	29
Recording the radio	30
Tape-to-tape recording	30

Timer operations and convenient functions

Using the timers	31
Changing the sound range display	34
Muting the volume	34
Using headphones	34
Enjoying karaoke (For Australia and N.Z.)	35
External unit connections	36
Optional antenna connections	37
Using other equipment	37

References

Troubleshooting guide	38
Maintenance	39
Cassette tape selection and care	39
Technical specifications	Back cover

Safety precautions

Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life.

Place it at least 15 cm away from wall surfaces to avoid distortion and unwanted acoustical effects.

Do not place heavy items on the unit.

Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire.

Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock.

Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION!

- DO NOT INSTALL, OR PLACE THIS UNIT, IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

(For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

Before use

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL \perp OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use

Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


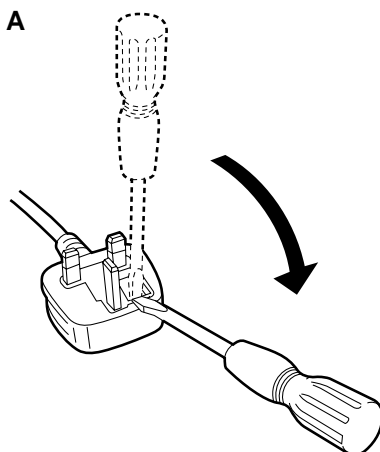


Figure B

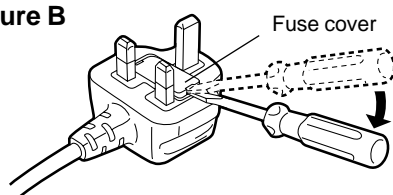

2. Replace the fuse and close or attach the fuse cover.

Figure A


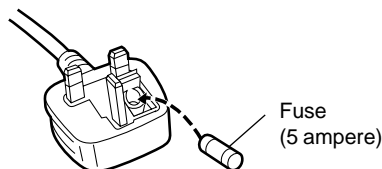


Figure B


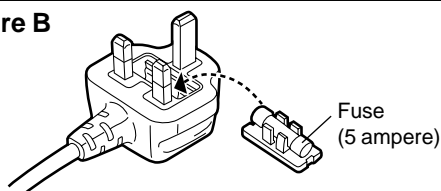


Simple set-up and play

STEP 1 Locating

The illustrations show SC-EH780 for the United Kingdom and Eastern Europe.

Components

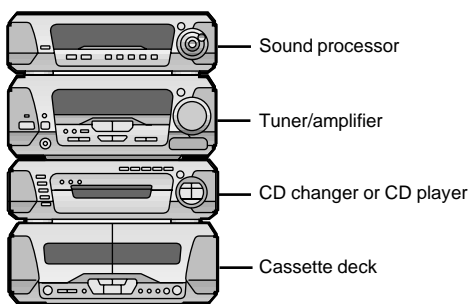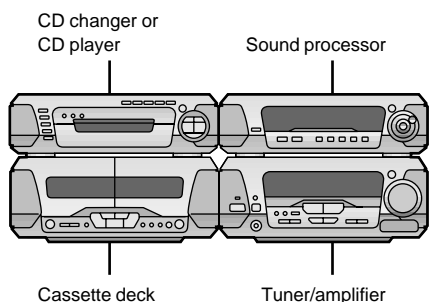

Note

Do not put the CD changer or CD player on the top of the tuner/amplifier. Heat can damage your CDs.

Caution

- Use the speakers only with the recommended system. Failure to do so may lead to damage to the amplifier and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.
- Do not attempt to attach these speakers to walls using methods other than those described in this manual.


If irregular colouring occurs on your television

These speakers are designed to be used close to a television, but the picture may be affected with some televisions and set-up combinations. If this occurs, turn the television off for about 30 minutes. The television's demagnetizing function should correct the problem. If it persists, move the speakers further away from the television.

Speakers

Optimum location

Distance: A=B=C=D=E

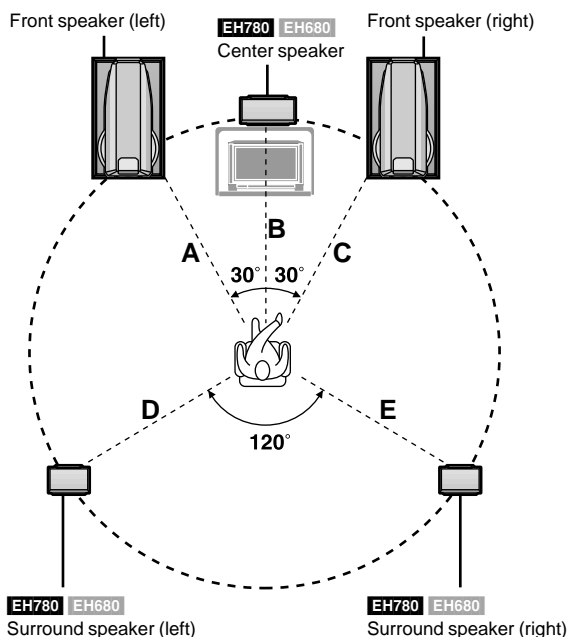

Use only the supplied speakers.

Using other speakers can damage the unit and sound quality will be negatively affected.

Front speakers

Left and right front speakers are exactly same.

Surround speakers


Place either side of the listening position, or slightly to the rear, about 1 meter higher than ear level with the Technics logo facing toward the listening position.

The effect varies with the type of music and the music source.

If you are unable to position the surround speakers as recommended You can put them near the front speakers and still achieve a surround-like effect (⇒ page 26, VIRTUAL REAR SURROUND).

Attaching to a wall

Set the speaker onto screws and slide through bracket to lock into position.

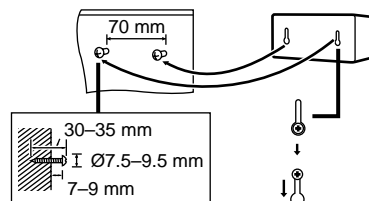

Note

The wall or pillar on which the speakers are to be attached should be capable of supporting 5 kg per screw.


Simple set-up and play

STEP 2 Speaker leads

The illustrations show SC-EH780 for the United Kingdom and Eastern Europe.
Do not connect the AC mains lead until all other connections are complete.



EH780 EH680

Surround and center speakers

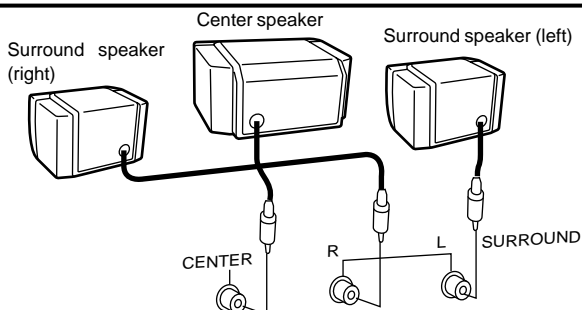

Right

Left

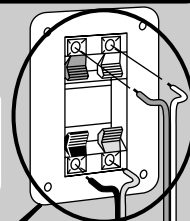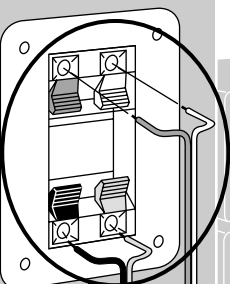

Front speaker

Connect the leads to the terminals of the same colour.

LF and HF stand for low frequency and high frequency.

 
Connect the left (L) side in the same way.

Note

- Never short-circuit positive (+) and negative (–) speaker wires.
- Be sure to connect only positive (red or grey) wires to positive (+) terminals and negative (black or blue) wires to negative (–) terminals.


Incorrect connection can damage the speakers.

Twist the vinyl tip and pull off.




Speaker side

EH780 EH580

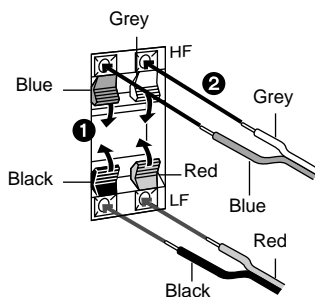


EH680

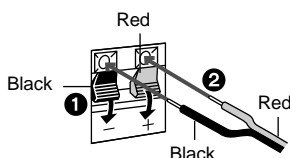


Tuner/amplifier side

EH780 EH580

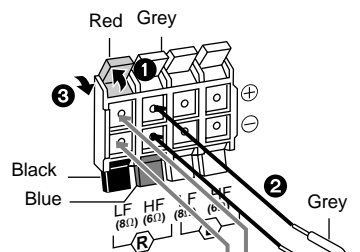


EH680

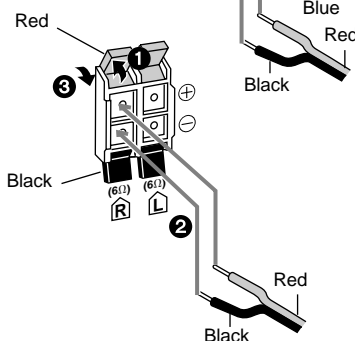

STEP 3 Antennas

FM indoor antenna

 Fix the other end of the antenna where reception is best.





For Australia and N.Z.

Twist the vinyl tip and pull off.



AM indoor antenna

 Twist the vinyl tip and pull off.

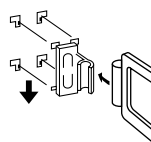


Keep loose antenna cord away from other wires and cords.

STEP 4 Flat cables and AC mains lead



Flat cables

Keep the cables as flat as possible against the back of the unit.
Connect the connectors to the terminals of the same colour.
Incorrect connection can damage the unit.

 Connecting



Disconnecting

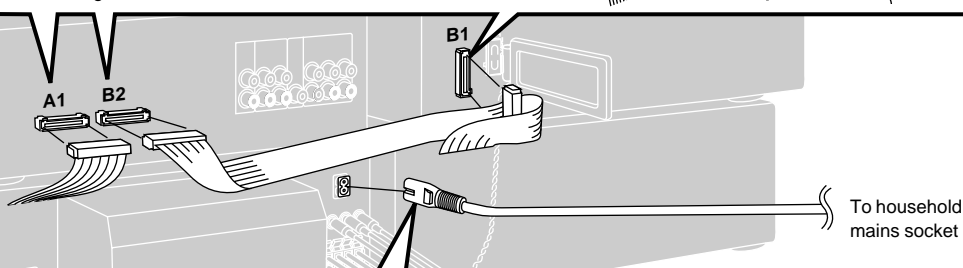 


AC mains lead

(For the United Kingdom only)
BE SURE TO READ THE CAUTION FOR THE AC MAINS LEAD ON PAGE 4 BEFORE CONNECTION.

Insertion of connector

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing. However there is no problem using the unit.

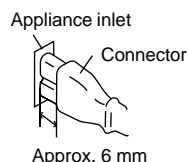


For your reference:

Information you enter into the unit's memory, except for time, remains intact for up to two weeks after the mains lead is disconnected.

Simple set-up and play — Listening to a CD —


EH780

2 Press DIRECT OPEN [DISC1]–[DISC5] and insert a CD.

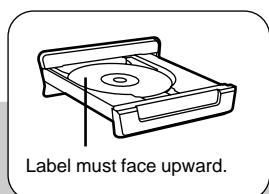

3 Press [▲, OPEN/CLOSE] to close the tray.

 
Repeat steps 2 and 3 to load the other trays.
Displayed when the unit is in CD mode.



Disc number Total number of tracks Total playing time


4 Press [▶] to start play.

 Play starts from the first track on the disc in the play position and finishes at the end of the last track on the final disc (see below).
You can start play from another disc by pressing [DISC, 1–5].



Track number Elapsed play time

5 Adjust the volume.

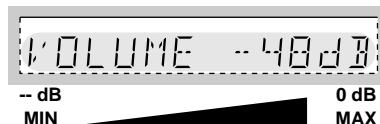

To stop the disc

Press [■].

To pause play

Press [II] during play. The ">" indicator flashes.
Press [II] or [▶] to resume play.

Note

You can not change CDs in other trays while a disc is playing.

Final disc

For example, if play starts from disc 4, disc 3 will be the final disc.
Order of progression: Disc 4→5→1→2→3

Play position


- The disc in the play position is ready to play immediately when you press [▶].
- "NO DISC" is displayed when a disc isn't in the play position.

EH680**EH580**


The illustration shows SC-EH580 for the United Kingdom and Eastern Europe.

1 Press [⏻/⏮] to turn the unit on.

2 Press [⏮, OPEN/CLOSE] and insert a CD.

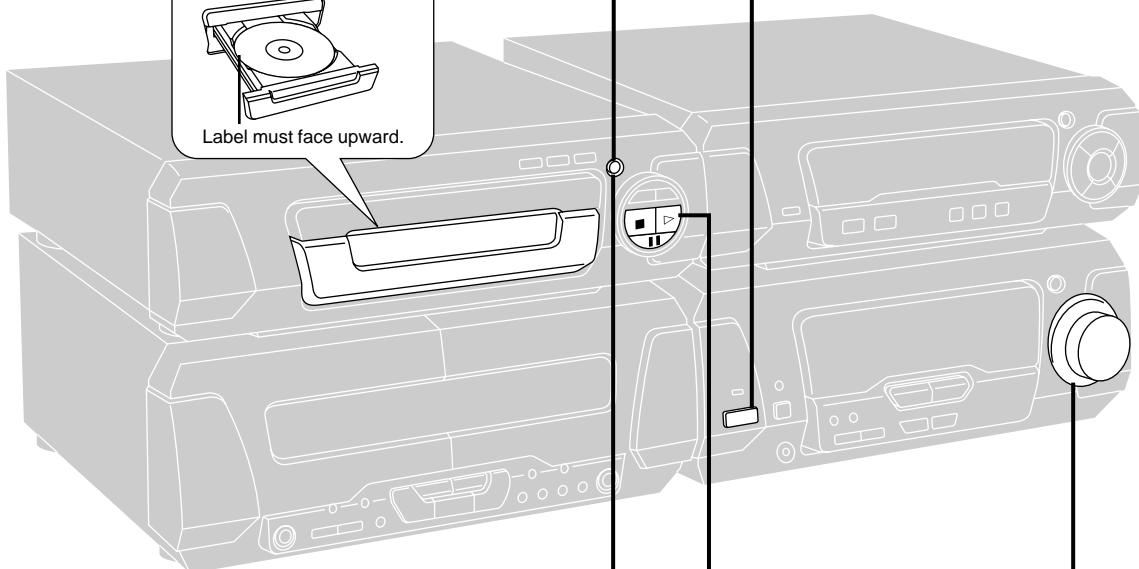


3 Press [⏮, OPEN/CLOSE] to close the tray.
Displayed when the unit is in CD mode.

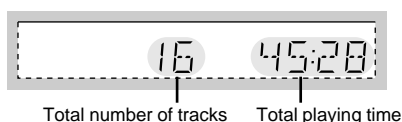

Total number of tracks Total playing time

4 Press [▶] to start play.

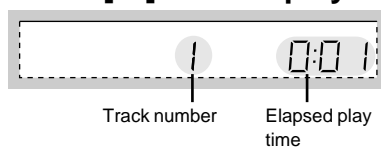

Track number

Elapsed play time

5 Adjust the volume.








-- dB
MIN

0 dB
MAX

To stop the disc
Press [■].

To pause play
Press [⏮] during play. The "▶" indicator flashes.
Press [⏮] or [▶] to resume play.

"NO DISC" is displayed when a disc isn't in the player.

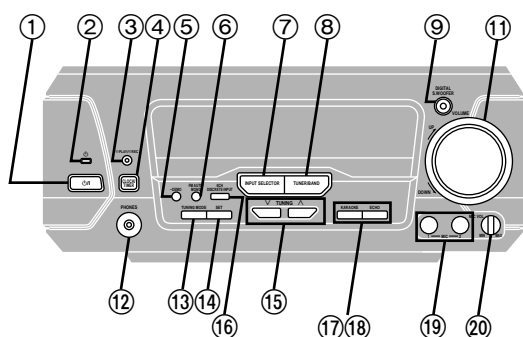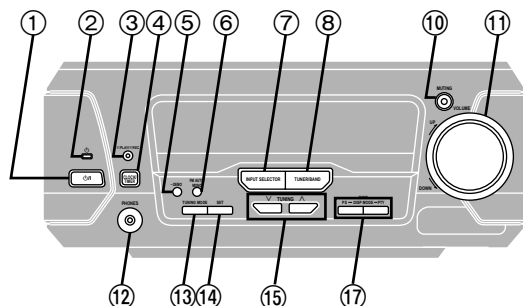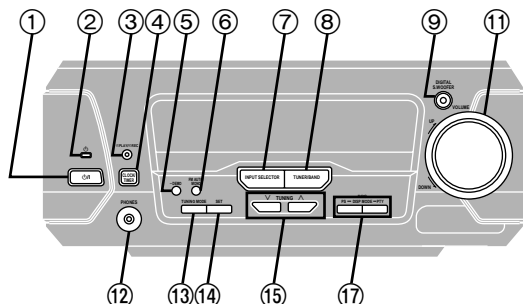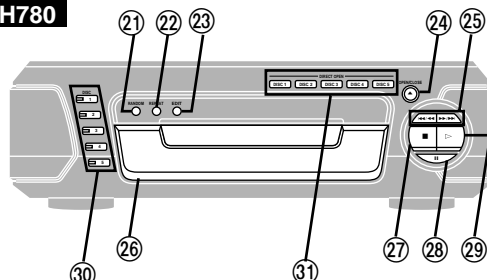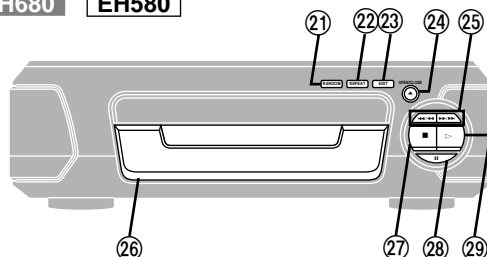
A**EH780****EH680****EH580****B****EH780****EH680****EH580****Front panel controls****A Tuner/amplifier**

- ① **Standby/on switch** (⏻/⏻) 8
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② **Standby indicator** (⏻)
When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
- ③ **Play timer/record timer button and indicator**
(⏻/⏻) 31, 32
- ④ **Clock/timer button** (CLOCK/TIMER) 13, 31, 32
- ⑤ **Demo button** (-DEMO) 13
- ⑥ **FM mode button** (FM AUTO/MONO) 17
- ⑦ **Source input button** (INPUT SELECTOR) 37
- ⑧ **Tuner/band button** (TUNER/BAND) 17
- ⑨ **EH780** **EH580**
Digital super woofer button and indicator
(DIGITAL S.WOOFER) 20
- ⑩ **EH680**
Muting button and indicator (MUTING) 34
- ⑪ **Volume control** (VOLUME) 8
- ⑫ **Headphone jack** (PHONES) 34
- ⑬ **Tuning mode button** (TUNING MODE) 17
- ⑭ **Set button** (SET) 13, 18
- ⑮ **Tuning buttons** (V, ^ TUNING) 13, 17
- ⑯ **EH780**
6ch discrete input button (6CH DISCRETE INPUT) 24
- ⑰ **EH780 for the United Kingdom and Eastern Europe**
EH680
EH580 for areas except the United Kingdom
RDS display mode button (RDS, PS-DISP MODE-PTY) 17
- EH780 for Australia and N.Z.**
- ⑱ **Karaoke and echo buttons** (KARAOKE, ECHO) 35
- ⑲ **Microphone jacks** (1-MIC-2) 35
- ⑳ **Microphone volume control** (MIC VOL) 35

B CD changer/CD player


- ⑲ **Random play button** (RANDOM) 16
- ⑳ **Repeat play button** (REPEAT) 16
- ㉑ **CD edit button** (EDIT) 29
- ㉒ **Disc tray open/close button** (▲, OPEN/CLOSE) 8, 9
- ㉓ **Skip/search buttons** (◀◀/◀, ▶/▶▶) 14
- ㉔ **Disc tray**
- ㉕ **Stop button** (■) 8, 9
- ㉖ **Pause button** (||) 8, 9
- ㉗ **Play button and indicator** (▶) 8, 9
The colour of the indicator depends on the operation taking place.
If stopped: orange
If playing: green
If paused: flashes
- EH780**
- ㉘ **Disc select buttons and indicators** (DISC, 1-5) 8
Green: Indicates that the tray is ready to play its CD or to be opened.
- ㉙ **Disc direct open buttons** 8
(DIRECT OPEN, DISC 1-DISC 5)

A

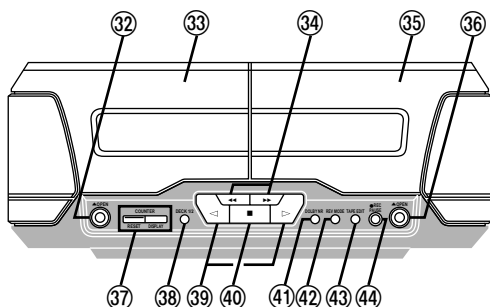


B


EH780

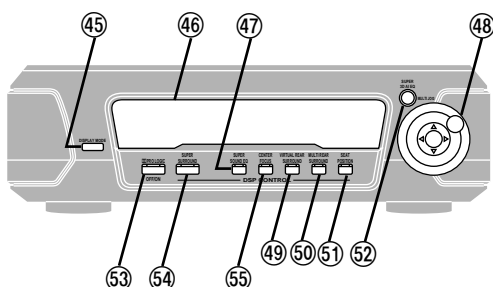

EH680

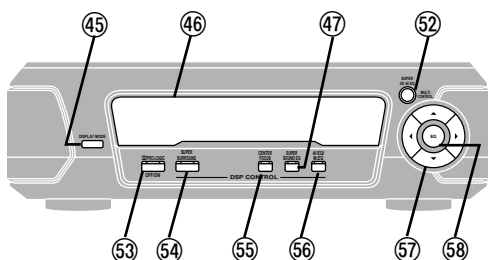

EH580

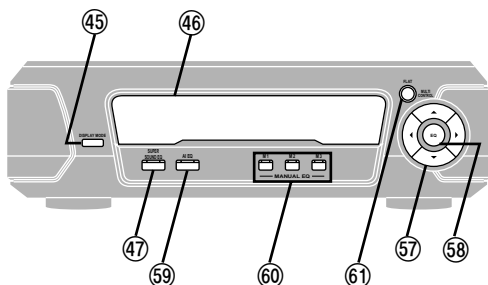

Front panel controls

A Cassette deck


- 32 Deck 1 cassette holder open button (▲ OPEN) 19
 - 33 Deck 1
 - 34 Fast forward/rewind, TPS buttons (◀◀, ▶▶) 19
 - 35 Deck 2
 - 36 Deck 2 cassette holder open button (▲ OPEN) 19
 - 37 Counter reset, display buttons
(COUNTER, RESET, DISPLAY) 28
 - 38 Deck 1/deck 2 select button (DECK 1/2) 19
 - 39 Playback buttons and indicators (<, >) 19
- The colour of the indicators depends on the operation taking place.
 If stopped, fast forwarding or rewinding: orange
 If playing or recording: green
 While carrying out TPS or recording is on standby: flashes
- 40 Stop button (■) 19
 - 41 Dolby noise reduction button (DOLBY NR) 19
 - 42 Reverse mode button (REV MODE) 19
 - 43 Tape edit button (TAPE EDIT) 30
 - 44 Record pause button (● REC PAUSE) 29

B Sound processor


- 45 Display mode button (DISPLAY MODE) 34
 - 46 Display
 - 47 Super sound EQ button (SUPER SOUND EQ) 20
- EH780**
- 48 Jog control and joystick (◀, ▶, ▲, ▼, MULTI JOG) 20
 - 49 Virtual rear surround button and indicator
(VIRTUAL REAR SURROUND) 26
 - 50 Multi rear surround button and indicator
(MULTI REAR SURROUND) 26
 - 51 Seat position button and indicator (SEAT POSITION) 27
- EH780 EH680**
- 52 Super 3D AI EQ button (SUPER 3D AI EQ) 21
 - 53 DOLBY PRO LOGIC button and indicator
(DOLBY PRO LOGIC, OFF/ON) 24
 - 54 Super surround button and indicator
(SUPER SURROUND) 24
 - 55 Center focus button and indicator
(CENTER FOCUS) 26
- EH680**
- 56 AI EQ/Manual EQ button (AI EQ/M. EQ) 21, 22
- EH680 EH580**
- 57 Multi control buttons
(◀, ▶, ▲, ▼, MULTI CONTROL) 21
 - 58 EQ button (EQ) 20
- EH580**
- 59 AI EQ button (AI EQ) 21
 - 60 Manual EQ buttons (M1, M2, M3) 22
 - 61 Flat button (FLAT) 20

A


The illustration shows the remote control for SC-EH780 for Australia and N.Z.

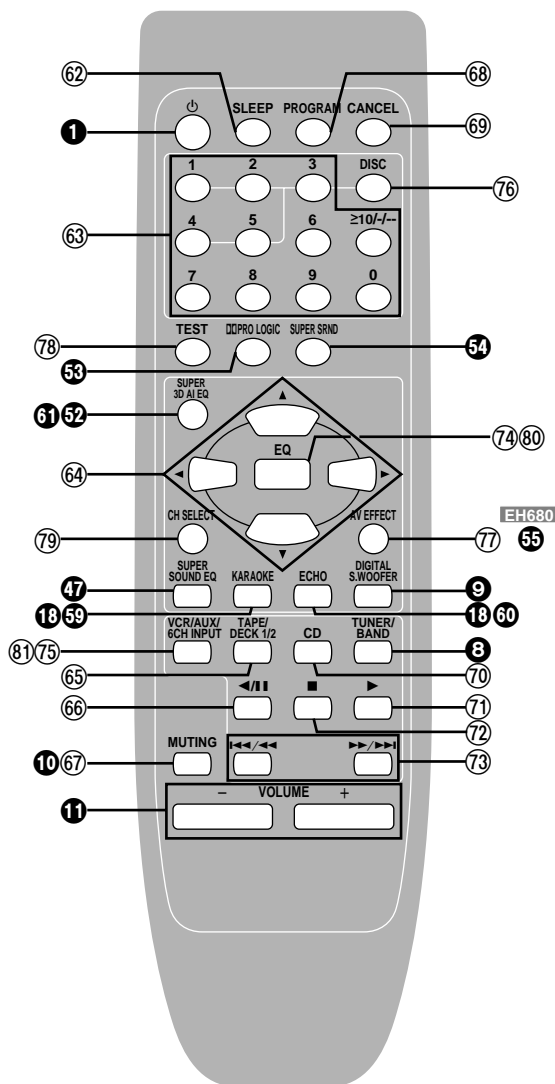**B**

R6, AA, UM-3

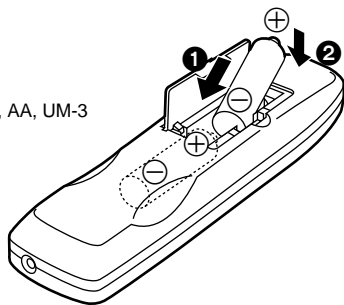**C**

Tuner/amplifier

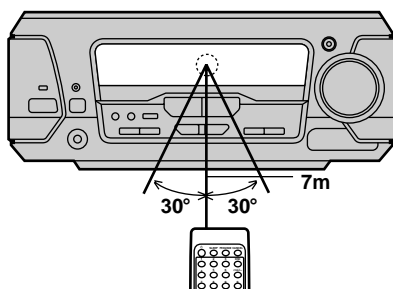**Front panel controls****A Remote control**

Buttons such as **1** function in the same way as the controls on the main unit.

- 62** Sleep timer button (SLEEP) 33
- 63** Numbered buttons (1–9, 0, ≥10/-/-) 15
- 64** Cursor buttons (◀, ▶, ▲, ▼) 25, 26
- 65** Tape select, deck 1/deck 2 select button (TAPE/DECK 1/2) 19
- 66** CD pause/tape reverse playback button (◀||) 8, 19
- 67** Muting button (MUTING) 34
- 68** Program button (PROGRAM) 15
- 69** Cancel button (CANCEL) 15
- 70** CD button (CD) 15, 16
- 71** CD play/tape forward playback button (▶) 15, 19
- 72** CD/tape stop button (■) 15, 19
- 73** CD skip/search, tape fast forward/rewind buttons (◀◀/▶▶) 14, 19

- EH780** **EH580**
- 74** EQ button (EQ) 20

- EH780**
- 75** Input select button (VCR/AUX/6CH INPUT) 37
- 76** Disc button (DISC) 15
- 77** AV effect button (AV EFFECT) 26

- EH780** **EH680**
- 78** Test button (TEST) 25
- 79** Channel select button (CH SELECT) 25

- EH680**
- 80** EQ/AI EQ/Manual button (EQ/AI EQ/M. EQ) 20–22

- EH680** **EH580**
- 81** AUX button (AUX) 37

The remote control**B Batteries**

- Insert so the poles (+ and –) match those in the remote control.
- Do not use rechargeable type batteries.

Do not;

- mix old and new batteries.
 - use different types at the same time.
 - heat or expose to flame.
 - take apart or short circuit.
 - attempt to recharge alkaline or manganese batteries.
 - use batteries if the covering has been peeled off.
 - keep together with metallic objects such as necklaces.
- Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.
- If electrolyte leaks from the batteries, consult your dealer.
- Wash thoroughly with water if electrolyte comes in contact with any part of your body.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

Replace if the unit does not respond to the remote control even when held close to the front panel.

C Use


 
Aim at the sensor, avoiding obstacles, at a maximum range of 7 meters directly in front of the unit.

- Keep the transmission window and the unit's sensor free from dust.
- Operation can be affected by strong light sources, such as direct sunlight, and the glass doors on cabinets.

Do not;


- put heavy objects on the remote control.
- take the remote control apart.
- spill liquids onto the remote control.

A

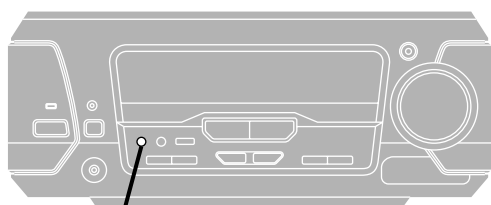



-DEMO

 -DEMO



B

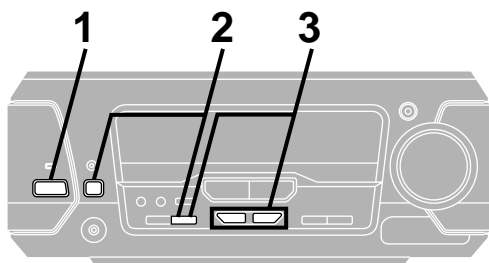 



1



2



 3

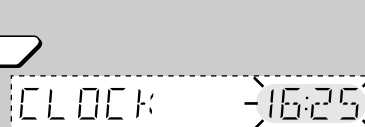

A Turning DEMO off

A demonstration of the display is shown if you have not set the clock.

You can reduce the power consumed in standby mode by turning the demonstration off.

While the unit is on:

Press and hold [-DEMO] until "NO DEMO" is displayed.

Each time you press and hold the button:

NO DEMO (off) ↔ DEMO (on)

B Setting the time

This is a 24-hour clock.

The example shows how to set the clock for 16:25 (4:25 p.m.).

1 Press [⏻/⏻] to turn the unit on.

2 ① Press [CLOCK/TIMER] to display "CLOCK".

Each time you press the button:

CLOCK → ⏻PLAY → ⏻REC → Original display

② Within 5 seconds

Press [SET].

3 ① Press [TUNING (∇ or ▲)] to set the time.

The time display can be changed in one minute units by tapping the buttons, and quickly by holding down the buttons.

② Press [SET].

The time is set and the original display is restored.

Displaying the clock

Press [CLOCK/TIMER].

The clock is shown for about 5 seconds.

 
Reset the clock regularly to maintain accuracy.

A


(a)




(b)





(c)

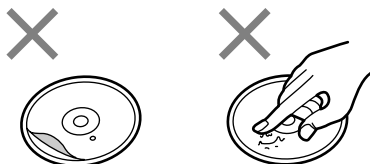**B**


(d)

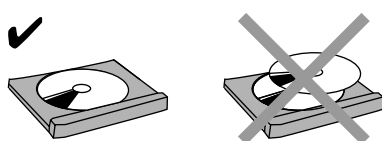

(e)

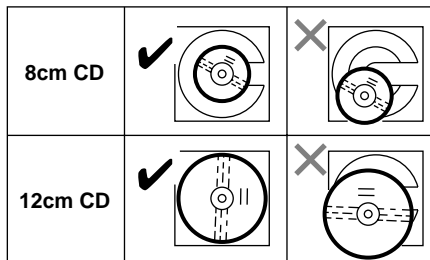 **C**

⏮️/⏪️ ⏩️/⏭️

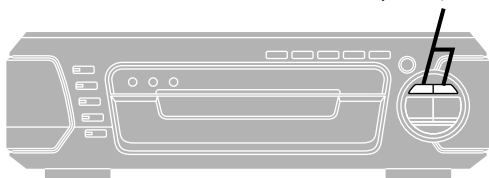

CDs

See pages 8 and 9 for basic CD play.

A CD selection

Choose discs with this mark (a).

Do not;

- use irregularly shaped discs (b).
- attach extra labels and stickers.
- use discs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers (c).
- attach scratch-proof covers or any other kind of accessory.
- write anything on the CD.
- clean CDs with liquids. (Wipe with a soft, dry cloth.)
- use CDs printed with label printers available on the market.

B To prevent damage

Always observe the following points.

- Load only 1 CD per tray (d).
- Load CDs as shown in figure (e).
- An adaptor is not needed with 8 cm CDs (singles).
- Set the system on a flat, level surface.
- Always unload all CDs before moving the system.


Do not;

- set it on top of magazines, inclined surfaces, etc.
- move the system while tray is opening/closing, or when loaded.
- put anything except CDs in trays.
- use cleaning CDs or CDs which are badly warped or cracked.

C Skipping and searching through tracks

Skipping tracks

Press [⏮️/⏪️] (backward), or [⏩️/⏭️] (forward).

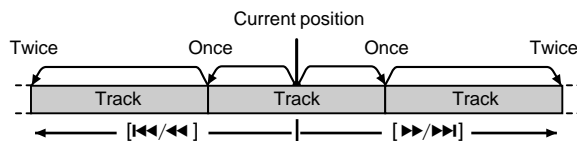

Searching through tracks

During play

Press and hold [⏮️/⏪️] (backward), or [⏩️/⏭️] (forward).

Note

- Skipping is done in the selected order in program play (⇒ page 15).
- You cannot skip to tracks already played in random play (⇒ page 16).
- You can search only within tracks in program and random play.

Note on CD-R and CD-RW

This unit can play CD-DA format audio CD-R and CD-RW that have been finalized* upon completion of recording. It may not be able to play some CD-R or CD-RW due to the condition of the recording.

* Finalizing is a process that enables CD-R/CD-RW players to play audio CD-R and CD-RW.

Program play

Select up to 24 tracks to play in the order you choose.

Remote control only

Preparation: Press [CD] to put the unit in CD mode.

1 Press [PROGRAM].

2 [EH780]

① Press [DISC].

② Within 10 seconds or so
Press [1]-[5] to select the disc.

3 Select the track with the numbered buttons.

For tracks numbered 10 and over, press [$\geq 10/-$] then the two digits.
e.g. To select track 21: [$\geq 10/-$] → [2] → [1]

Repeat steps 2 through 3 (SC-EH780) or step 3 (SC-EH680 and SC-EH580) to program the tracks in the required order.

The total playing time of the programmed tracks is displayed.

4 Press [▶].

All the tracks are played in the selected order.

To cancel

Press [PROGRAM].

"CLEAR" is displayed and all the tracks are canceled.

"FULL" is displayed

If 24 tracks have been programmed.

"---:--" is displayed if;

- total playing time for the tracks is over 99 minutes and 59 seconds.
 - a track numbered 25 or over was programmed.
 - a disc not in playing position was programmed (SC-EH780).
- Tracks can still be programmed and played.

To check the contents of the program

- ① Press [CANCEL]. "CANCEL" will light.
- ② Press [\lll/\lll] or [\ggg/\ggg]. Each time you press the button, the disc numbers (SC-EH780), track numbers and programmed order are displayed.
- ③ After the playing time appears on the display, press [CANCEL]. "CANCEL" goes out.

To add to the end of the program

Repeat steps 2 and 3 (SC-EH780) or step 3 (SC-EH680 and SC-EH580).

To cancel tracks

A particular track	1. Press [CANCEL]. 2. Select the track with [\lll/\lll] or [\ggg/\ggg] then press [CANCEL]. 3. Press [CANCEL] again.
All tracks	Press [PROGRAM] or [■] while stopped.

To program the track you are listening to

Press [PROGRAM]. The program mode engages and the current track is automatically recorded as program No. 1.

Preparation: Press [CD] on the remote control or [INPUT SELECTOR] on the tuner/amplifier to select "CD".

A Direct access play

EH780

Starts normal play from a selected track on a selected disc to the last track of the final disc (➡ page 8).

EH680 EH580

Starts normal play from a selected track to the last track.

Remote control only

1

EH780

① Press [DISC].

② Within 10 seconds or so
Press [1]-[5] to select the disc.

2 Select the track with the numbered buttons.

For tracks numbered 10 and over, press [≥10/-] then the two digits.
e.g. To select track 21: [≥10/-]→[2]→[1]

B Random play

EH780

Plays the tracks on all discs once each in random order.

EH680 EH580

Plays the tracks once each in random order.

Press [RANDOM].

To cancel

Press [RANDOM].

"RANDOM" goes out.

For your reference:

In the program play mode (➡ page 15), the programmed tracks are played randomly.

C Repeat play

EH780

Repeats all tracks on all discs or all programmed tracks.

EH680 EH580

Repeats all tracks or programmed tracks.

Press [REPEAT] before or during play.

To cancel


Press [REPEAT].

"↺" goes out.

To repeat only your favourite track(s)

- ① Program the track(s) you want (➡ page 15).
- ② Press [REPEAT] and make sure "↺" is displayed.
- ③ Press [>]. Play will start.

A

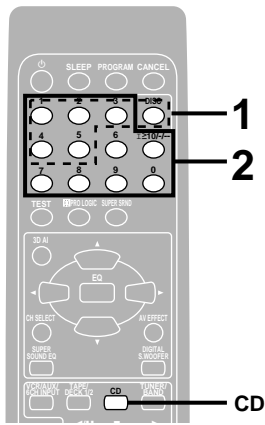


1 EH780


①



 ②




2

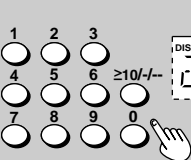

≥10/-

 
00:01



INPUT SELECTOR


EH780

RANDOM REPEAT

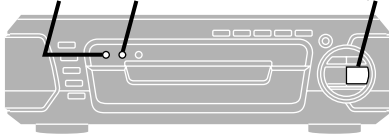

EH680 EH580

RANDOM REPEAT

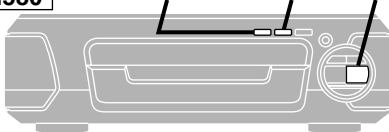

B

EH780

RANDOM



EH680 EH580

RANDOM



RANDOM

00:01

C

EH780

REPEAT



EH680 EH580

REPEAT



16

45:26

The radio: manual tuning

Radio stations can be tuned manually by selecting the station's frequency or they can be preset into channels to make it easy to tune (➔ page 18).

Preparation: Press [⏻/I] to turn the unit on.

- 1 Press [TUNER/BAND] to select FM or AM.**
Each time you press the button: FM ↔ AM
- 2 Press [TUNING MODE] to select "MANUAL".**
Each time you press the button: MANUAL ↔ PRESET
- 3 Press [TUNING (∨ or ∧)] to tune in the desired broadcast.**

If you press and hold [TUNING (∨ or ∧)] for a moment, the frequency starts changing automatically. It stops when a station is found. It may also stop if there is outside interference. Press and hold [TUNING (∨ or ∧)] again to restart. You can also stop the frequency changing by pressing [TUNING (∨ or ∧)].

"TUNED" is displayed when a radio station is tuned.

"ST" is displayed when a stereo FM broadcast is being received.

- 4 Adjust the volume.**

A If noise is excessive in FM

Press [FM AUTO/MONO] to display "MONO".

This mode improves sound quality if reception is weak for some reason but broadcasts are heard in monaural.

Press [FM AUTO/MONO] again to cancel the mode. "MONO" goes out. MONO is also canceled if the frequency is changed.

Turn off "MONO" for normal listening. Stereo and monaural broadcasts are automatically played as they are received.

Stations can be preset in monaural. Carry out presetting manually (➔ page 18).

RDS broadcasting

- B**
- EH780 for the United Kingdom and Eastern Europe**
 - EH680**
 - EH580 for areas except the United Kingdom**

This unit can display the text data transmitted by the radio data system (RDS) available in some areas.

If the station you are listening to is transmitting RDS signals, "RDS" will light up on the display.

Displaying the text data

Press [PS-DISP MODE] to display a station name.

Press [DISP MODE-PTY] to display a program type.


 


 
Each time you press the button:

Frequency display ↔ PS or PTY display

Note


RDS displays may not be available if reception is poor.

※"M.O.R M"="Middle of the road music"

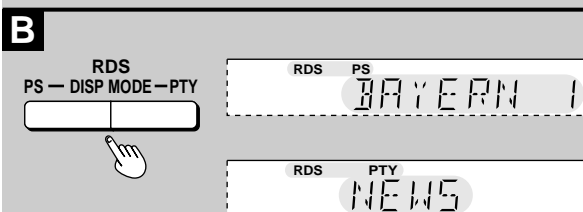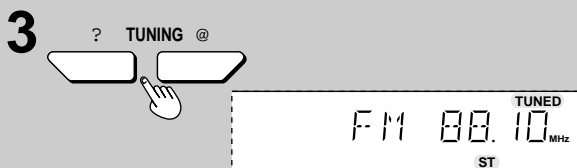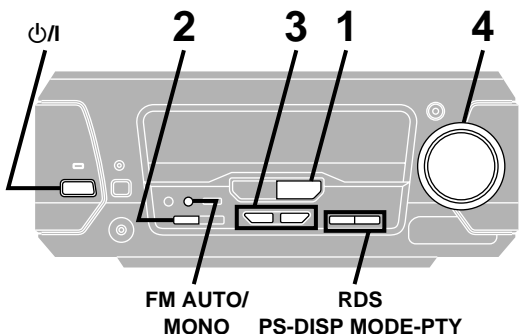

PTY displays

NEWS	VARIED	FINANCE	COUNTRY
AFFAIRS	POP M	CHILDREN	NATIONAL
INFO	ROCK M	SOCIAL A	OLDIES
SPORT	M.O.R M※	RELIGION	FOLK M
EDUCATE	LIGHT M	PHONE IN	DOCUMENT
DRAMA	CLASSICS	TRAVEL	TEST
CULTURE	OTHER M	LEISURE	ALARM
SCIENCE	WEATHER	JAZZ	

 

TUNING MODE SET

The radio: preset tuning

There are two methods of presetting stations.

Automatic presetting: The stations the tuner can receive are preset.

Manual presetting: You can select the stations to preset and the order they are preset in.

There are 39 channels available for presetting.

A Automatic presetting

Do the following once each for FM and AM.

Preparation: Tune to the frequency presetting is to begin at (➡ page 17).

Hold down [SET].

Release the button when "AUTO MEMORY" appears.

The tuner presets all the stations it can receive into the channels in ascending order. FM stations are preset into channels 1 to 39, and AM stations are preset into channels 21 to 39.

"SET OK" is shown when presetting is complete and the last station to be preset is played.

"ERROR" is displayed if the tuner doesn't receive any stations. Do presetting manually if this happens (see below).

Note

AM stations replace any FM channels that were preset in channels 21 to 39.

B Manual presetting

Preset the stations one at a time.

- ① Tune to the required station.
- ② Press [SET].
- ③ Press [TUNING (v or ^)] to select a channel.
- ④ Press [SET].

The station occupying a channel is erased if another station is preset in that channel.

C Selecting channels






Preparation: Press [⏻] to turn the unit on.

On the remote control

- 1 Press [TUNER/BAND].
- 2 Press the numbered buttons to select the channel.
For channels 1 to 9 press the corresponding number.
For channels 10 or over press [≥10/-/-] then the two digits.
e.g. To select channel 21: [≥10/-/-]→[2]→[1]
- 3 Adjust the volume.

On the main unit

- ① Select "PRESET" with [TUNING MODE].
- ② Press [TUNING (v or ^)] to select the channel.

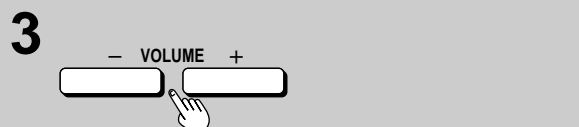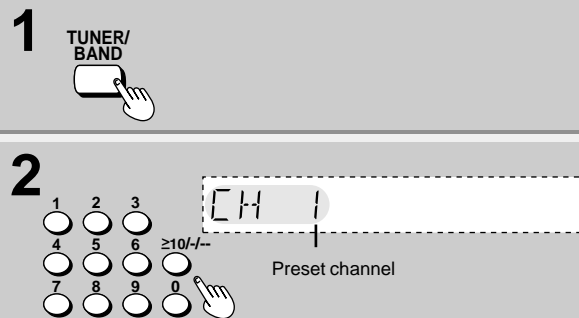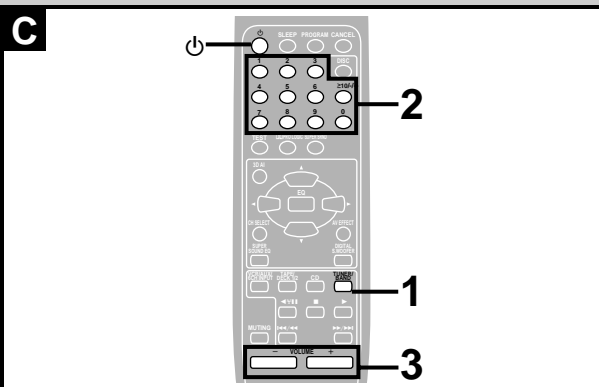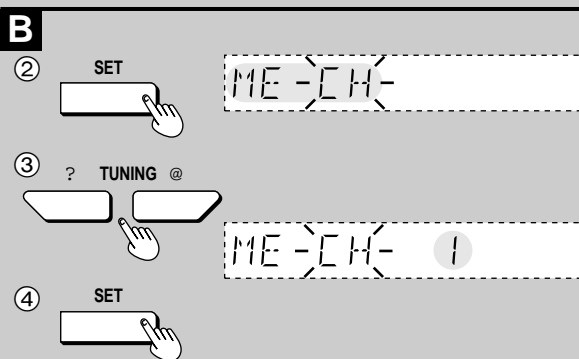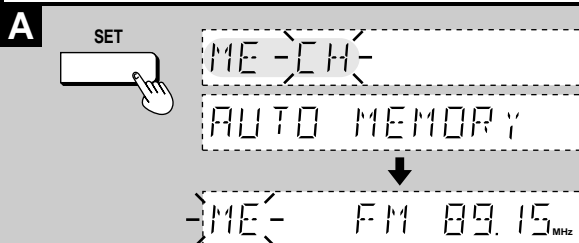

Cassette tapes

See page 39 for tape selection.

Preparation: Press [⏻/I] to turn the unit on.

- 1 Press [▲ OPEN] on deck 1 or deck 2 and insert the cassette.
Close the holder by hand.
- 2 Press [DOLBY NR] to select Dolby NR on ("DOLBY NR" appears) or off.
- 3 Press [REV MODE] to select the reverse mode.
Each time you press the button:
 ➡: One side is played.
 ➡➡: Both sides are played.
 ⬅➡: Both sides are played 8 times each.
- 4 Press [◀] (reverse side) or [▶] (forward side).
Play begins and the indicator changes to green.
- 5 Adjust the volume.

To stop the tape

Press [■].

A To change the deck to be used

Press [DECK 1/2] to select the deck you want to play.

To listen to 2 tapes consecutively

Insert a tape into each deck and select "⬅➡". Both tapes will be played 8 times each.

B Finding a place on a tape

To fast-forward and rewind

Press [◀◀] or [▶▶] while the tape is stopped.

To find the beginning of a track (TPS: Tape program sensor)

Press [◀◀] or [▶▶] during play.

Play resumes from the beginning.

Tape direction	rewind	fast-forward
▶	◀◀	▶▶
◀	▶▶	◀◀

- Each deck's play direction is stored in the system's memory.
- You can fast-forward or rewind the tape while you are playing or recording a tape in another deck.

Press [DECK 1/2] to switch to the deck not playing, and then press [◀◀] or [▶▶]. After the above operation, be sure to press [DECK 1/2] to reselect the deck playing.

Note

TPS may not operate correctly in the following situations:

If the interval between tracks is less than 4 seconds.

If there is noise between tracks.

If there are silent parts within tracks.






Dolby noise reduction

 
Dolby NR reduces "hissing" when playing tapes. It increases the high frequency region when recording and then reduces it in playback. Use the same system during playback and recording. This unit has Dolby B NR which reduces noise to a third.

Prerecorded cassettes and equipment marked "DOLBY NR" use Dolby B NR.


Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

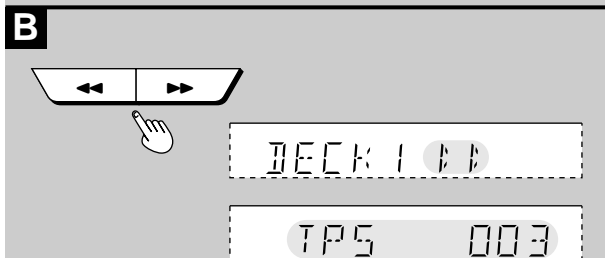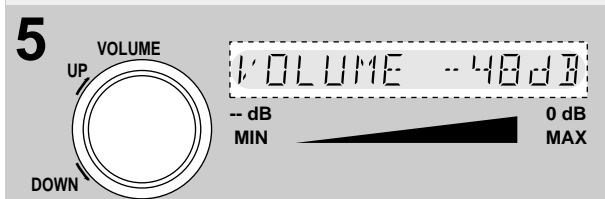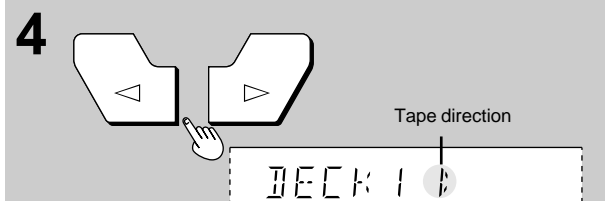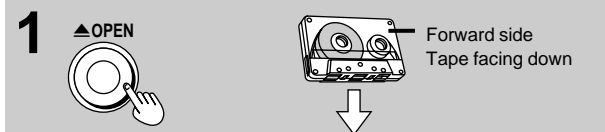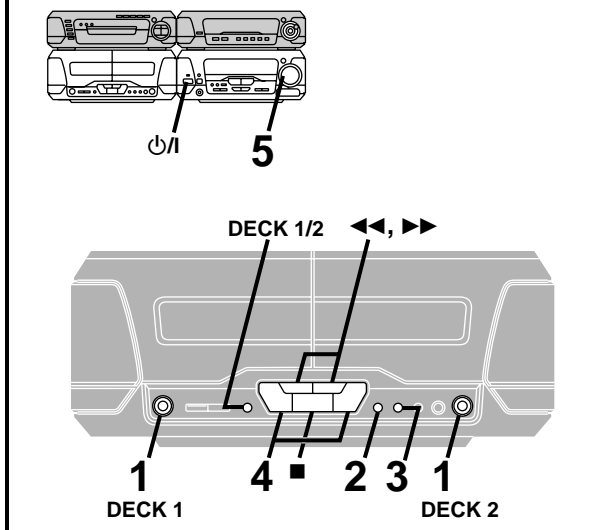




DIGITAL
S. WOOFER

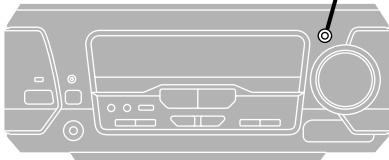


SUPER
SOUND EQ MULTI JOG


EH780

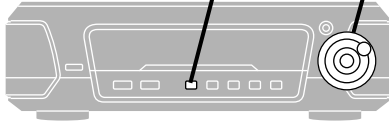

EH680

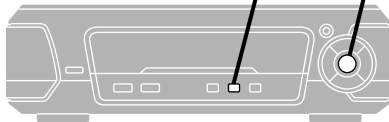

EH580

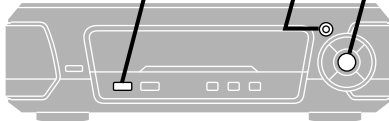

A

DIGITAL
S. WOOFER



MID

B

EH780

EH680

EH580

SUPER
SOUND EQ



SUPER
SOUND EQ




SUPER



SOUND EQ

C

MULTI JOG

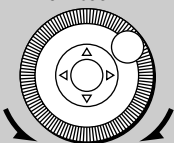

HEAVY

D/E



HEAVY

A Boosting the super woofer

EH780 EH580

 
Boosting the super woofer adds power to the bass.

Press [DIGITAL S.WOOFER].

The indicator turns green.

Each time you press the button:

MID (medium) → MAX (high) → cancel (off)



There is only one level when listening through headphones.

To cancel

Press [DIGITAL S.WOOFER] to turn the indicator off.

B Using the super sound equalizer

Turning on the super sound equalizer gives you a more powerful sound.

Press [SUPER SOUND EQ].

The indicator turns green.

To cancel

Press [SUPER SOUND EQ] so the indicator turns orange (SC-EH780) or turns off (SC-EH680 and SC-EH580).

Changing sound field and quality

C EH780

Turn [MULTI JOG] to select a setting.

Each time you turn:

HEAVY: Adds punch to rock.

CLEAR: Clarifies higher sounds.

SOFT: For background music

HALL: Expands sound to make you feel like you were in a hall.

AI-EQ: Adjust sound with the acoustic image equalizer (➡ page 21).

M.EQ: Create your own effects (➡ page 22).

FLAT: Canceled (no effect is added).

D EH680

Press [EQ] to select a setting.

Each time you press the button:

HEAVY: Adds punch to rock.

CLEAR: Clarifies higher sounds.

SOFT: For background music

HALL: Expands sound to make you feel like you were in a hall.

FLAT: Canceled (no effect is added).

E EH580

Press [EQ] to select a setting.

Each time you press the button:

HEAVY: Adds punch to rock.

CLEAR: Clarifies higher sounds.

SOFT: For background music

On the remote control

EH780 EH580 Press [EQ].

EH680 Press [EQ/AI EQ/M.EQ].

To cancel

EH780 Turn [MULTI JOG] to select "FLAT".

EH680 Press [EQ] to select "FLAT".

EH580 Press [FLAT].

Note

EH780 EH680

Turn off the effect if sound quality reduces when using HALL with a source.

Changing sound field and quality

Using the acoustic image equalizer (AI EQ)

Achieve subtle sound quality settings with the soft, sharp, heavy, and light coordinates.

- 1 **EH780**
Turn [MULTI JOG] to select "AI EQ".

EH680

Press [AI EQ/M.EQ] to select "AI EQ".

The indicator turns green.

EH580

Press [AI EQ] to select "AI EQ".

The indicator turns green.

- 2 **EH780** **EH680**
Press [SUPER 3D AI EQ] to select the surround level.

Each time you press the button:

AI EQ → SUPER 3D AI 1 → SUPER 3D AI 2

SUPER 3D AI 1: Adds a surround effect to the AI EQ.

SUPER 3D AI 2: Adds a stronger surround effect to the AI EQ.

- 3 **Change the sound quality with [◀, ▶, ▲, ▼].**

Adjust softness and sharpness with [◀, ▶].

Adjust heaviness and lightness with [▲, ▼].

The original display is restored on the display panel in about 5 seconds.

To cancel

EH780 Turn [MULTI JOG] to select "FLAT".

EH680 Press [AI EQ/M.EQ] to select "FLAT". The indicator turns off.

EH580 Press [FLAT]. The indicator turns off.

The changes you make are stored and automatically recalled the next time you select AI EQ.

 
Note

EH780 **EH680**


- Turn off the effect if sound quality reduces when using SUPER 3D AI EQ with a source.

- You cannot select "SUPER 3D AI 1" or "SUPER 3D AI 2" while:


- Using a surround system (➡ page 23)
- Karaoke mode is on (SC-EH780 for Australia and N.Z. only ➡ page 35)
- Listening to the radio
- Using headphones




EH780

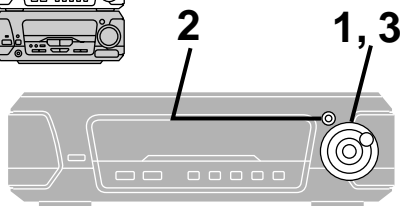

EH680

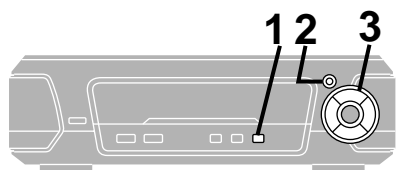

EH580

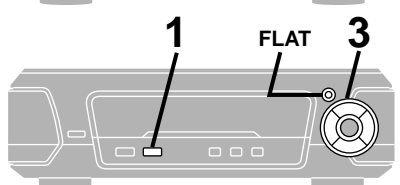

1

EH780

EH680

EH580

MULTI JOG

AI EQ/
M.EQ

AI EQ



AI EQ

2

EH780

EH680

SUPER
3D AI EQ



SUPER

3D AI 1

3



EH780

EH680

EH580

MULTI JOG

 MULTI
CONTROL

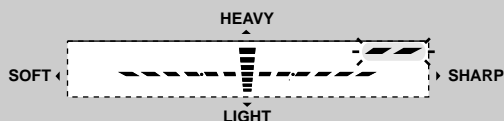

Using the manual equalizer (M.EQ)

Create your own sound quality effects.
SC-EH580 has three manual equalizers.

1

EH780

Turn [MULTI JOG] to select "MANUAL".

EH680

Press [AI EQ/M.EQ] to select "MANUAL".

The indicator turns green.

EH580

Press [M1], [M2], or [M3] to select the equalizer you want to set.

The indicator turns green.

2

Change the sound quality with [◀], [▶], [▲], [▼].

① Select the sound range to be adjusted with [◀] or [▶].

② Adjust the level with [▲] or [▼].

Repeat step 2 to set the desired sound quality.

The original display is restored on the display panel in about 5 seconds.

To cancel

 
EH780 Turn [MULTI JOG] to select "FLAT".

EH680 Press [AI EQ/M.EQ] to select "FLAT". The indicator turns off.


EH580 Press [FLAT]. The indicator turns off.

Note


The changes you make are stored and automatically recalled the next time you select the manual equalizer.




EH780

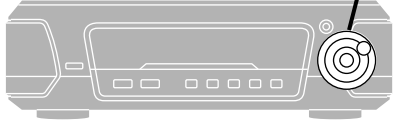

EH680

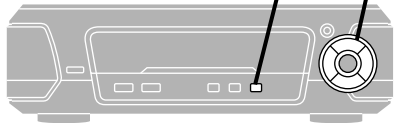

EH580

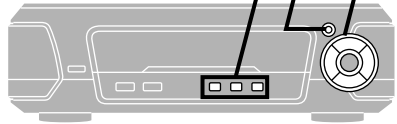

1

EH780

MULTI JOG



EH680

AI EQ/
M.EQ



MANUAL

EH580

M1

M2

M3



MANUAL EQ 1

2


EH780

MULTI JOG




EH680

 MULTI
CONTROL



EH580

 ①



②



Enjoying surround sound

EH780 EH680

The following chart gives a summary of this unit's surround features. It also shows additional effects that can be used to enhance your enjoyment.



Note

- All the features are only effective if speakers are used. No discernible effect will be heard through headphones.
- You may experience a reduction in sound quality when these surround systems and effects are used with some sources. If this occurs, turn the surround system or effect off.

EH780 When you turn on one of the surround systems, the indicator for the additional effects you can use also light.

"DTS", "DTS Digital Surround" and "DTS Digital Out" are registered trademarks of Digital Theater Systems, Inc.

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.


Surround system	Features	Software	Additional effects See below for details.
EH780 6CH DISCRETE INPUT (⇒ page 24)	<ul style="list-style-type: none"> • Use this input selector to enjoy 5.1 channel sources (e.g. Dolby Digital or DTS) played on a DVD player with 5.1 channel output and a built in Dolby Digital/DTS decoder (⇒ page 36 for connection, page 24 for operation). • Connect a subwoofer (not included) to the SUBWOOFER terminal to enhance the surround effect (⇒ page 36). 	DVDs encoded with Dolby Digital or DTS can be identified with these marks.  See the manual for the equipment you have connected for details on the types of software you can use.	(A) Center focus (B) Virtual rear surround (C) Multi rear surround (D) Seat position
EH780 EH680 DOLBY PRO LOGIC (⇒ page 24)	<ul style="list-style-type: none"> • This unit has built-in Dolby Pro Logic circuitry so you can enjoy Dolby Surround. • Dolby Pro Logic is a decoding system that was developed to get a better sense of presence from sources encoded with Dolby Surround. The feeling of position has been improved by the addition of a separate center speaker channel. • If your DVD player only has 2-channel output, you can still enjoy surround sound when playing 5.1 channel software by using Dolby Pro Logic. 	Software encoded with Dolby Surround can be identified with this mark.  <ul style="list-style-type: none"> • DVD • Laser Disc • Video tape • CD 	EH780 (A) Center focus (B) Virtual rear surround (C) Multi rear surround (D) Seat position EH680 (A) Center focus
EH780 EH680 SUPER SUR-ROUND (⇒ page 24)	<div> <div>MOVIE</div> <ul style="list-style-type: none"> • This mode adds surround effects to movie software that hasn't been recorded with the above systems. • In MOVIE mode you can adjust the volume of the surround speakers to get the best surround effect. </div> <div> <div>MUSIC</div> <p>This mode adds surround effects to stereo sources.</p> </div>	Any stereo sound source except for the radio. <ul style="list-style-type: none"> • Video tape • CD • Tape 	EH780 (B) Virtual rear surround (C) Multi rear surround (D) Seat position

Additional effects

(A) Center focus

EH780 EH680 (⇒ page 26)


- This mode makes it seem like the sound from the center speaker is coming from within the television.
- The center speaker should be placed above the television.

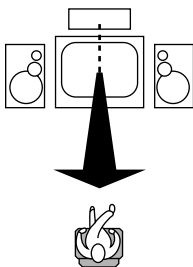

(B) Virtual rear surround

EH780 (⇒ page 26)


- This mode is useful if you have to place your surround speakers near the front speakers due to the layout of your room.
- This mode makes it seem like the sound from the surround speakers is coming from behind you.

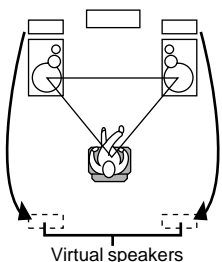

(C) Multi rear surround

EH780 (⇒ page 26)


This mode makes it seem like there are multiple surround speakers in your room, increasing the cinema-like atmosphere.


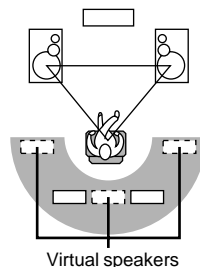


(D) Seat position


EH780 (⇒ page 27)

 This mode helps maintain the sound position even if the listening position itself is changed.

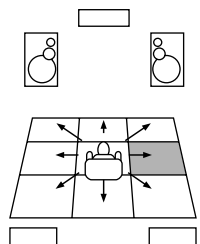

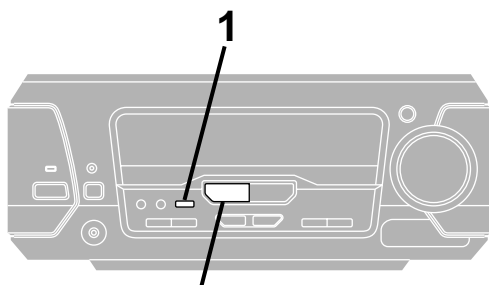

INPUT SELECTOR

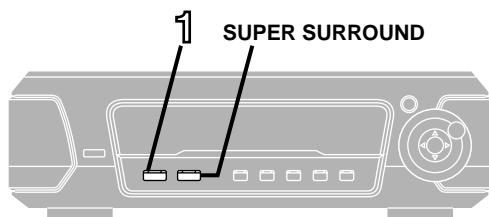

SUPER SURROUND

EH780 EH680

See page 25 for speaker level adjustments.

A 6CH DISCRETE INPUT

EH780

Preparation: Connect a DVD player with a built in Dolby Digital or DTS decoder (⇒ page 36).

- 1 Press [6CH DISCRETE INPUT].
- 2 Playback a Dolby Digital or DTS source.

On the remote control

Press [VCR/AUX/6CH INPUT] to select "6CH INPUT".

To cancel

Press [INPUT SELECTOR] to select another source.

Note

You cannot record or enjoy karaoke (For Australia and N.Z.) when you are using 6CH DISCRETE INPUT. To record or enjoy karaoke with DVDs, ensure the DVD player is also connected to the AUX (DVD) terminals and select "AUX (DVD)" with [INPUT SELECTOR] (⇒ page 37).

B DOLBY PRO LOGIC

EH780 EH680

- 1 Press [DOLBY PRO LOGIC, OFF/ON].
The indicator turns green.
- 2 Playback a Dolby Surround source.

To cancel

Press [DOLBY PRO LOGIC, OFF/ON] so the indicator turns off.

C SUPER SURROUND

EH780 EH680

Press [SUPER SURROUND] and select "MOVIE" or "MUSIC".

The indicator turns green.

Each time you press the button:

MUSIC → MOVIE → STEREO SOUND (off)

To cancel

Press [SUPER SURROUND] to select "STEREO SOUND".

The indicator turns off.

A

1

6CH DISCRETE INPUT



6CH INPUT

B

1

DOLBY PRO LOGIC

OFF/ON



DOLBY



PRO LOGIC

C

SUPER SURROUND



MUSIC

EH780 EH680

Speaker level adjustments

6CH DISCRETE INPUT, DOLBY PRO LOGIC

If the level of the speakers appears to be different while listening to a source, adjust the level of the speakers to the same apparent level.

6CH DISCRETE INPUT: Adjust while listening to a surround source.

If your DVD player is able to output a test signal, you can use it instead of playing a source.

DOLBY PRO LOGIC: Adjust while listening to a test signal.

Preparation: Set the volume level of the front speakers normally used for enjoying the source.

Remote control only

① 6CH DISCRETE INPUT

Press [CH SELECT] to select the speaker.

The speaker channel changes each time you press the button.

DOLBY PRO LOGIC

Press [TEST].

A test signal is output from each speaker in order.

To stop the test signal, press [TEST] again.

Lch: Front left

Cch: Center

Rch: Front right

RSch: Right surround

LSch: Left surround

SWch: Subwoofer (6CH DISCRETE INPUT; only when connected)

•The surround channel for Dolby Pro Logic is monaural so the indicator appears as "Sch" instead.




② Press [▲] (to increase level) or [▼] (to decrease level).

SUPER SURROUND


While playing a source

1. Press [CH SELECT].

2. Press [▲] (to increase level) or [▼] (to decrease level).

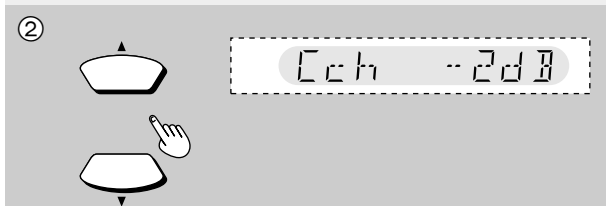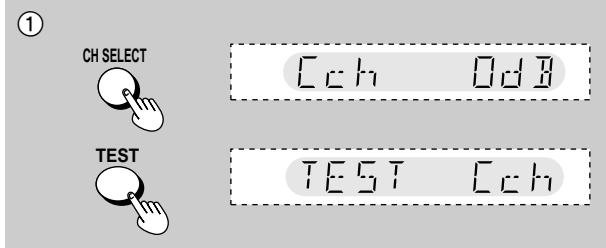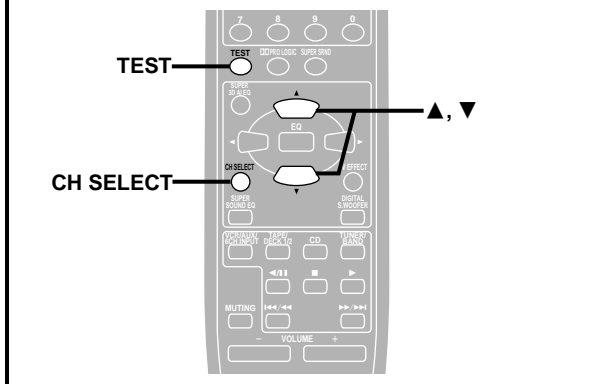

Surround effects

 

EH780

VIRTUAL REAR SURROUND

CENTER FOCUS


MULTI REAR SURROUND

EH680

CENTER FOCUS

EH780

EH680

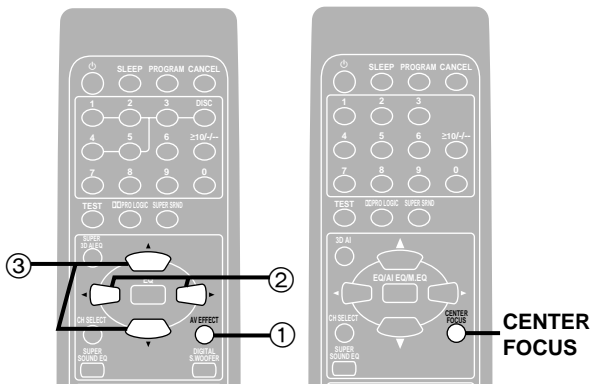

A

CENTER FOCUS



CENTER FOCUS

B

VIRTUAL REAR SURROUND



VIRTUAL REAR

C

MULTI REAR SURROUND



MULTI REAR

EH780 EH680

These effects can be used with the surround systems described on page 24. Refer to the chart on page 23 for details on which effects can be used.

EH780: These effects are available when the corresponding indicators are alight.

A CENTER FOCUS **EH780 EH680**

Press [CENTER FOCUS].

The indicator turns green.

To cancel

Press [CENTER FOCUS] so the indicator turns orange (SC-EH780) or turns off (SC-EH680).

On the remote control

EH780

- ① Press [AV EFFECT].
- ② Press [◀] or [▶] so the CENTER FOCUS indicator flashes.
- ③ Press [▲] (ON) or [▼] (OFF).

EH680

Press [CENTER FOCUS].

B VIRTUAL REAR SURROUND **EH780**

Press [VIRTUAL REAR SURROUND].

The indicator turns green.

To cancel

Press [VIRTUAL REAR SURROUND] so the indicator turns orange.

On the remote control

- ① Press [AV EFFECT].
- ② Press [◀] or [▶] so the VIRTUAL REAR SURROUND indicator flashes.
- ③ Press [▲] (ON) or [▼] (OFF).

C MULTI REAR SURROUND **EH780**

Press [MULTI REAR SURROUND].

The indicator turns green.

To cancel

Press [MULTI REAR SURROUND] so the indicator turns orange.

On the remote control

- ① Press [AV EFFECT].
- ② Press [◀] or [▶] so the MULTI REAR SURROUND indicator flashes.
- ③ Press [▲] (ON) or [▼] (OFF).

SEAT POSITION EH780

1 Press [SEAT POSITION].

The indicator flashes green.

2 While the indicator is flashing (within 10 seconds) Adjust the seat position with [◀, ▶, ▲, ▼].

The indicator flashes for 10 seconds then lights green.

To cancel

1. Press [SEAT POSITION] so the indicator flashes.
2. Press [SEAT POSITION] again while the indicator is flashing so it turns orange.



 

On the remote control

- ① Press [AV EFFECT].
- ② Press [◀] or [▶] so the SEAT POSITION indicator flashes.
- ③ Press [▲] (ON).
- ④ Adjust the seat position with [◀, ▶, ▲, ▼].

To turn it off, after steps ① and ② press [▼] so the indicator turns orange.

Note


- The seat position is remembered by the unit and is reactivated when you turn seat position on again.
- When used with virtual rear surround, seat position is changed in 3 horizontal steps.

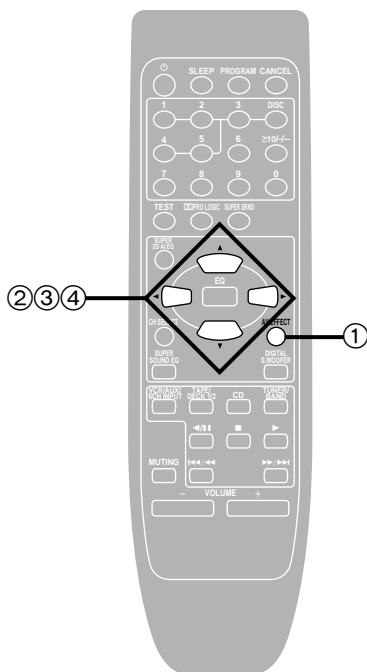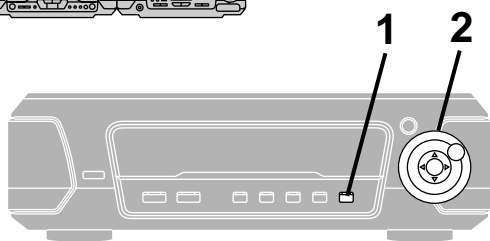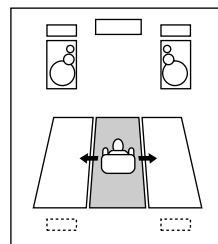

1


SEAT
POSITION

(On the sound processor)

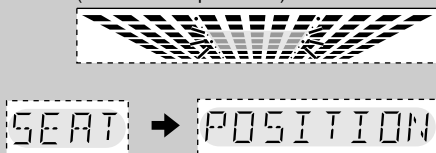

2

MULTI JOG

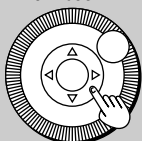

Before recording (Deck 2 only)

See page 39 for tape selection.

Note

EH780

You cannot record when [6CH DISCRETE INPUT] is selected.

Volume, sound quality and surround effects have no effect on recording. Sound quality and surround effects are automatically set to flat when recording.

A To display the tape counter while recording

Press [COUNTER DISPLAY].

The counter is displayed for about 5 seconds.

- Press [COUNTER RESET] to reset the counter.
- To display or reset the tape counter for deck 1, first press [DECK 1/2].

B Erasing recordings

- 1 Press [INPUT SELECTOR] to select "TAPE".
- 2 Insert the recorded tape into deck 2.
- 3 Press [DOLBY NR] so the "□□ NR" indicator goes out.
- 4 Select the reverse mode.
- 5 Press [● REC PAUSE].
- 6 Press [◀] or [▶].

C Erasure prevention

The illustration shows how to remove the tabs to prevent recording. To record on the tape again, cover as shown, being careful not to cover the high position discrimination hole.

Your attention is drawn to the fact that recording pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

D Preparatory steps

Do these steps before each recording.

Wind up the leader tape so recording can begin immediately.

1 Press [▲ OPEN] on deck 2 and insert the cassette.

2 Press [DOLBY NR] to select Dolby NR on ("□□ NR" appears) or off.

(⇒ "Dolby noise reduction", page 19)

3 Press [REV MODE] to select the reverse mode.


Each time you press the button:

↔: One side only records.

↔ and ↔: Both sides record (forward → reverse).


"↔" automatically changes to "↔" when [● REC PAUSE], [EDIT] or [TAPE EDIT] is pressed.

A B

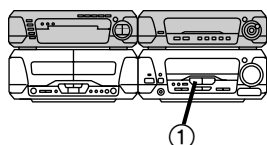

COUNTER
RESET DISPLAY

DECK 1/2

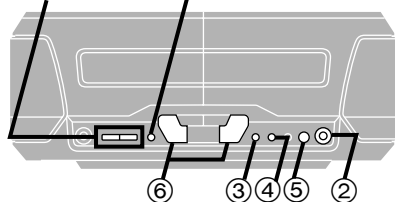

A

COUNTER

DISPLAY


DECK 2 003

COUNTER


RESET

DECK 2 000

C

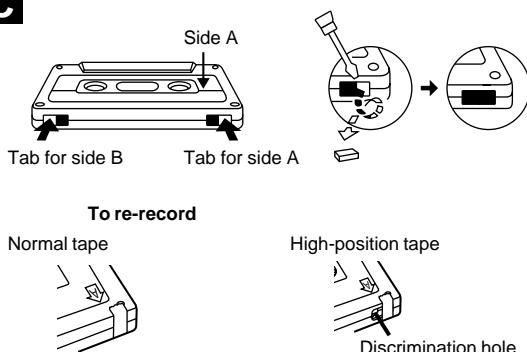


D

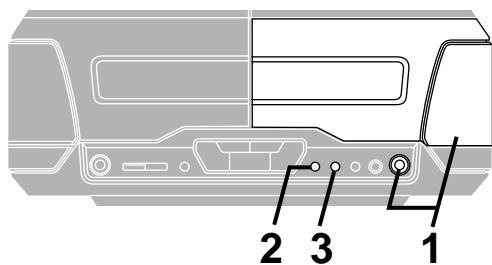

1

 ▲ OPEN



Forward side
Tape facing down

2

DOLBY NR



DECK 2 000

□□ NR

2

3

REV MODE



DECK 2 000

□□ NR

2

Recording CDs

Preparation:

- Do the preparatory steps (⇒ page 28).
- Insert the CD(s) you want to record (⇒ page 8 or 9).
- **EH780**
Press [DISC, 1–5] on the CD changer to select the disc where you want to start recording, then press [■] to stop the disc.

A Normal recording

- 1 Press [◀] (reverse side) or [▶] (forward side) then [■] to set the tape direction.
- 2 Press [● REC PAUSE].
The deck goes into the recording standby mode and the indicator “◀” or “▶” starts flashing.
- 3 Press [▶] on the CD changer or CD player.
Recording starts automatically.

4 seconds after the CD(s) finishes, the deck goes into the recording standby mode.

To stop recording

EITHER

Press [■] on the CD changer or CD player.

The deck goes into the recording standby mode 4 seconds later.

OR

Press [■] on the deck.

Recording stops immediately but the CD continues to play.

To record programmed tracks

Program tracks before step 1 (⇒ page 15).

B One touch CD editing

This function makes it easier for you to record from discs.

- When recording, if a track is cut off in the middle at the end of the front side, it is recorded from the beginning on the reverse side. (Ensure the reverse mode “↔” is selected.)

- At the end of the reverse side recording stops and the current track will be interrupted.

After pressing [◀] or [▶] then [■] on the cassette deck to set the tape direction,

Press [EDIT].

Recording starts. In the meantime, “CD EDIT” will scroll across the display.

After edit-recording has finished, the cassette deck automatically stops.


 
To stop editing

Press [■] on the CD changer or CD player.


The cassette deck also stops. “EDIT OUT” scrolls across the display.

To edit programmed tracks

Program the tracks (⇒ page 15) and press [EDIT].

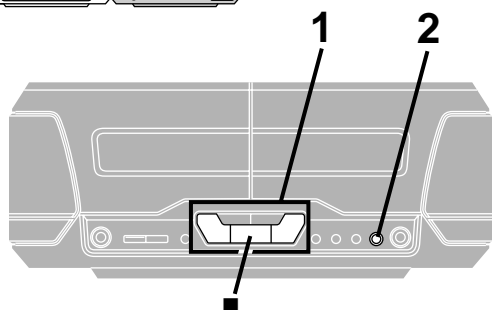


EH780

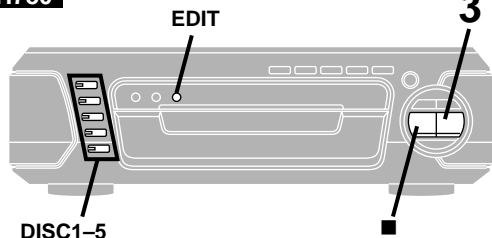


EH680

EH580

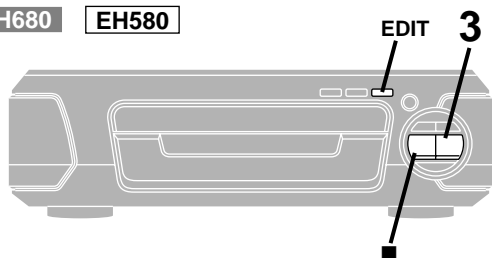

A


1

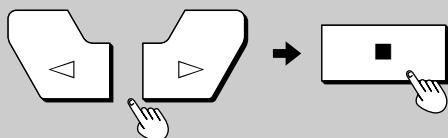

2



 3



B

EH780





EH680

EH580

EDIT

 EDIT

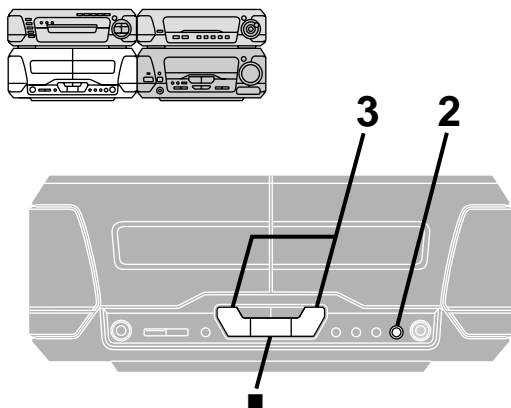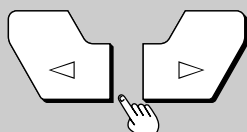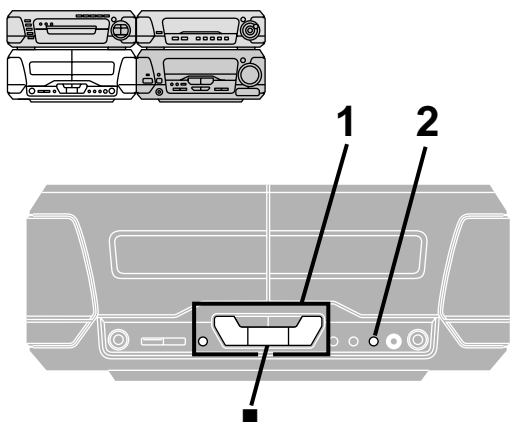


A**2****3****B****1**

①


DECK 1/2



②

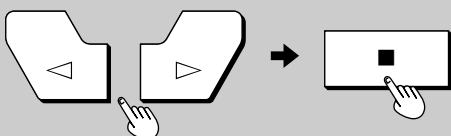**2**

 TAPE EDIT

**A Recording the radio**

Preparation: Do the preparatory steps (➡ page 28).

1 Tune to the required station.

(➡ page 17 or 18)

2 Press [● REC PAUSE].

The deck goes into the recording standby mode and the play indicator "◀" or "▶" starts flashing.

3 Press [◀] (reverse side) or [▶] (forward side) to start recording.**To stop recording**

Press [■].

To temporarily stop recording

Press [● REC PAUSE].

The deck goes into recording standby mode.

To resume recording press [◀] or [▶] with the flashing indicator.

B Tape-to-tape recording

Preparation:

- Do the preparatory steps 1 and 3 (➡ page 28).
- Insert the tape to be recorded in deck 1.

1 Set the tape direction on both decks.

- ① Press [DECK 1/2] to select "DECK 2".
- ② First press [◀] or [▶], and then [■].

Repeat steps ① and ② for deck 1.

2 Press [TAPE EDIT] to start recording.

The indicator "◀" or "▶" shows deck 2 direction.

If either deck 1 or deck 2 stops, the other deck also stops.

To stop recording

Press [■].

Both decks will stop.


 
To enjoy another source while recording

Start playing the other sound source.

You can change the volume level and tone quality without affecting the recording.

Note

The recording level and the noise reduction effect of the original (playback) tape will be recorded on the new tape.

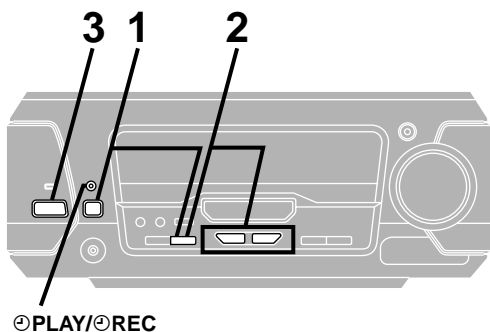

1

①

 


②



2

①



②



a

 
 
b

c

d



3



Using the timers

The play timer

This timer starts play of the selected source at the selected time.

The example shows settings for preset radio channel 1 to play between 6:30 and 7:40 at -48 dB.

Preparation: Turn the unit on, set the time (→ page 13), preset radio stations if you want the timer to start playing the radio (→ page 18).

1 ① Press [CLOCK/TIMER] to select “ⓅPLAY”.

Each time you press the button:

CLOCK→ⓅPLAY→ⓅREC→Original display

② Press [SET] within 3 seconds.

2 Follow these steps to set items a to d.

① Press [TUNING (V or ^)] to select the condition required and

② Press [SET].

a Start time

b Finish time

c Source

TUNER↔CD↔TAPE

Insert a CD or tape if you select these sources.

If you select TUNER

Select a preset channel.

d Volume

The play timer is now on standby. The display shows each condition again then restores the original display.

3 Press [Ⓟ/I] to turn the unit off.

ⓅPLAY/ⓅREC indicator remains illuminated to show the play (or record) timer is on.

The timer starts at the set time with the volume increasing gradually to the set level.

To cancel the timer

Press [ⓅPLAY/ⓅREC] so “ⓅPLAY” goes out.

 


 
Each time you press the button:

ⓅPLAY→ⓅREC→ⓅPLAY ⓅREC→Light off (OFF)

The play timer will be canceled, but the settings stay in the memory.

For your reference:

When you insert cassettes in decks 1 and 2, deck 1 has priority.

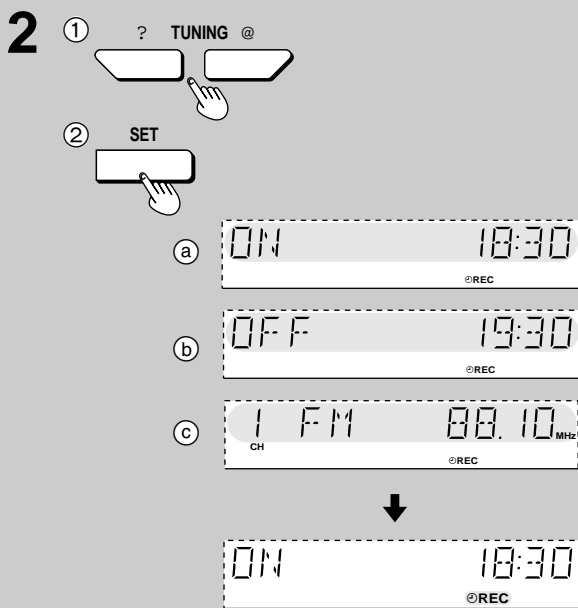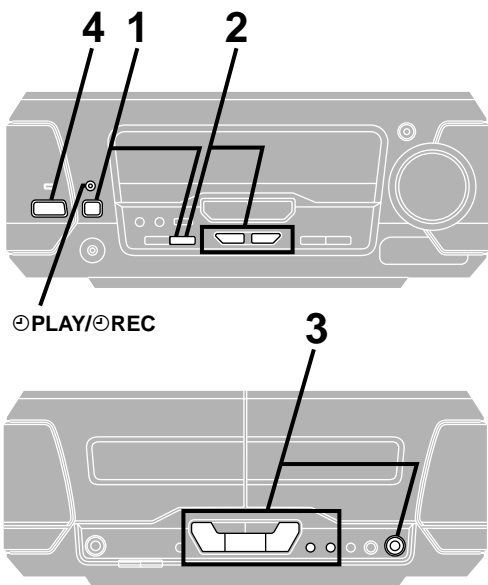

Using the timers

The record timer

This timer records the radio at the set time.

The example shows settings for recording preset channel 1 from 18:30 to 19:30.

Preparation: Turn the unit on, set the time (→ page 13), preset radio stations (→ page 18).

- 1 ① Press [CLOCK/TIMER] to select "REC".
Each time you press the button:
CLOCK → ②PLAY → ③REC → Original display
- 2 ② Press [SET] within 3 seconds.
- 2 Follow these steps to set items (a), (b) and (c).
① Press [TUNING (V or ^)] to select the condition required and
② Press [SET].
 - a Start time
 - b Finish time
 - c Preset channel

The record timer is now on standby. The display shows each condition again then restores the original display.

- 3 Prepare for recording.
 - ① Insert a tape into deck 2.
 - ② Select the Dolby NR mode.
 - ③ Select the reverse mode.
 - ④ Select the tape direction.
- 4 Press [P/|] to turn the unit off.
②PLAY/③REC indicator remains illuminated to show the record (or play) timer is on.

Recording starts 30 seconds before the set time with the volume muted during the set time.

To cancel the timer

 
Press [②PLAY/③REC] so "REC" goes out.

Each time you press the button:

②PLAY → ③REC → ②PLAY ③REC → Light off (OFF)

The record timer will be canceled, but the settings stay in the memory.

A




⏮PLAY/⏮REC


CLOCK/
TIMER

B

SLEEP

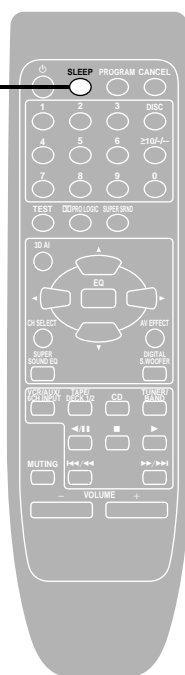

SLEEP

 

Using the timers

A The play and record timers

Turning the timers on and off

The timers come on at the set times if the ⏮PLAY/⏮REC indicator is on. They can be turned on and off by pressing [⏮PLAY/⏮REC].

Checking the timers

Press [CLOCK/TIMER] to select "⏮PLAY" (or "⏮REC").

The timer conditions are shown in the following order:

Play timer:

Start time → Finish time → Source → Volume

Record timer:

Start time → Finish time → Selected radio station

The timers can be checked even if the unit is off.

Playing the unit after the timers are set

The unit can be used after the timers are set. Make sure the unit is off before the set start time.

Note

- If you turn the unit off and on again while a timer is functioning, the finish time setting will not be activated.
- If the unit is on, the timer will not function. The system must be in the standby mode.
- This system retains the ON/OFF time settings until you make a new setting. If you make a new ON time setting, you must make a new OFF time setting.
- Do not turn DEMO on after setting a timer. The timers will not work while DEMO is on.

B The sleep timer

Remote control only

This timer turns the unit off after a set time.

While playing a source

Press [SLEEP] to select the time (minutes).

Each time you press the button:

SLEEP 30 → SLEEP 60 → SLEEP 90

↑ SLEEP OFF ← SLEEP 120 ←

To cancel the sleep timer

Press [SLEEP] to select "SLEEP OFF".

"SLEEP" goes out.

To confirm the remaining time

(While the timer is functioning)

Press [SLEEP].

The remaining time is shown for about 5 seconds.

 
To change the setting

Press [SLEEP] to display the remaining time, then press again to select the required time.


Using the timers together

Any of the timers can be used together, but ensure the unit is off before the start time for the record and play timers.

A



DISPLAY MODE

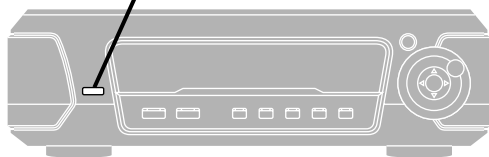

DISPLAY MODE



 
a



b



c



(On the sound processor)

A Changing the sound range display

The sound processor shows the level of each sound range with the three types of display described below.

Press [DISPLAY MODE].

The spectrum display will change as follows.

a Normal display

This display indicates the strength of the sound in each tonal range.

b Peak-hold display

The peak sound value of each sound range is held on the display for about one second after it occurs.

c Aurora display

The peak sound value of each sound range is displayed in inverted form.

B Muting the volume

EH780 EH580

Remote control only

Press [MUTING].

Volume is reduced to minimum.

EH680

On the remote control or the tuner/amplifier

Press [MUTING].

The indicator lights green and volume is reduced to minimum.

To cancel

Press [MUTING] again.

"MUTING" goes out and the volume is restored.

To cancel from the tuner/amplifier, turn [VOLUME] to minimum (— dB), then raise it to the required level.

Muting is also canceled when the unit is turned off.

C Using headphones (not included)


Reduce the volume before connection.

Avoid listening for prolonged periods of time to prevent hearing damage.

Plug type: 3.5 mm stereo


B

MUTING

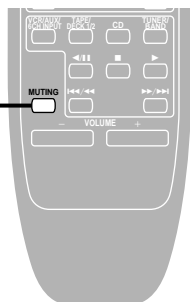

MUTING

EH680

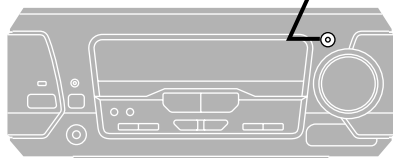

MUTING




EH680

MUTING



 
C



PHONES



VOLUME

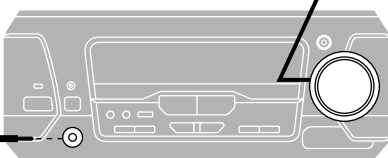

You can do karaoke with CDs and tapes.

Preparation:

Lower the volume with [MIC VOL] and connect the microphone.

Use a dynamic microphone.

Plug type: 6.3 mm monaural

1 Press [KARAOKE] to select a voice mode.

Each time you press the button:

MONO L → MONO R → VOICE MUTE → off (Normal)

•Karaoke CDs and tapes

MONO L: Only left channel sound (No vocal)

MONO R: Only right channel sound (Vocal)

Select no vocal for karaoke. Vocal and no vocal may be reversed.

•Normal music CDs and tapes

VOICE MUTE: Voice mute (Lowers vocal volume)

2 Start playing the CD or tape.

3 Adjust the main volume and microphone volume.

To cancel

Press [KARAOKE] to clear the display.

To record your performance

Start recording in deck 2 and then start singing.

Ensure the voice mode is set to off (at step 2 above) when playing the recording.

Note

The karaoke modes cannot be used with the radio, SUPER 3D AI EQ, 6CH DISCRETE INPUT or surround effects.

When using the VOICE MUTE function

•Voice mute may not function sufficiently or noise may interfere when using the following software.

•Monaural software

•Software with few musical instruments, including classic music and poetry recitations

•Software with duets or strong choruses


 
•VOICE MUTE reduces the level of the vocals but does not cancel them out completely.

A Using the echo effect

Press [ECHO].


Each time you press the button:

ECHO 1 → ECHO 2 → ECHO 3 → OFF

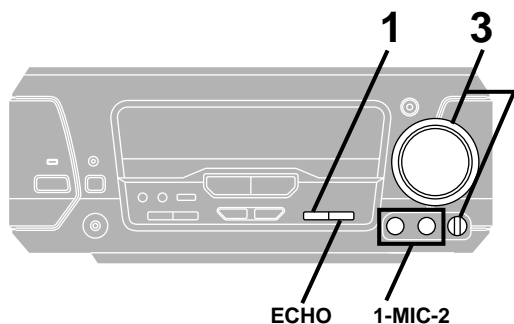



1

 KARAOKE





Original display

 3

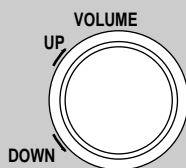

A

  
ECHO



ECHO


A

DVD player with 5.1ch output

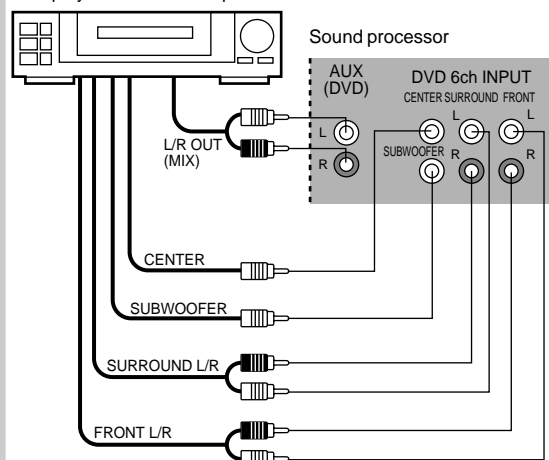


B

DVD player/Laser disc player
(without 5.1ch output), etc.

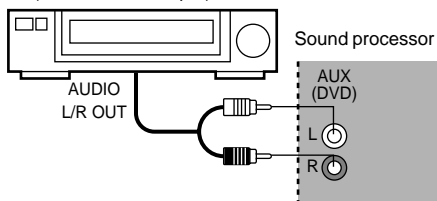


C

Video cassette recorder

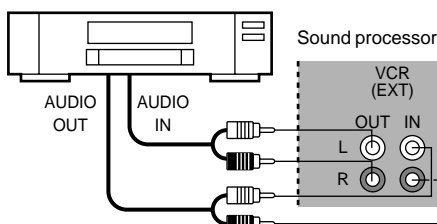

D

DVD player/Laser disc player/
Video cassette recorder, etc.

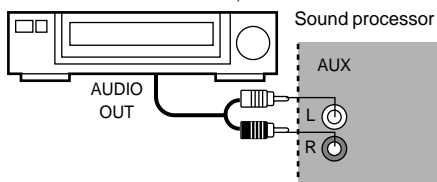

External unit connections

- Turn off all units before making connections.
- Refer to the manual of the other unit for details.
(Cables and equipment not included.)

Stereo phono cable (not included)

White (L) Red (R)

Connections to SC-EH780

A DVD player with 5.1ch output

This unit has the input terminals for 5.1ch surround systems but it does not have the decoders necessary to play them back. The DVD player should have these decoders and 5.1ch output.

To record sound from the DVD player

Connect to AUX (DVD).

Subwoofer

The included front speakers have superwoofers, but you can enhance surround sound from a unit connected to DVD 6ch INPUT by connecting another subwoofer to SUBWOOFER terminal.

B DVD player/Laser disc player (without 5.1ch output), etc.

This unit has Dolby Pro Logic circuitry. The sound will be reproduced with the same powerful stereophonic effects found in movie theaters.

C Video cassette recorder

You can enjoy the sound from your video cassette recorder.

Connections to SC-EH680/SC-EH580

D DVD player/Laser disc player/Video cassette recorder, etc.

You can enjoy the sound from your DVD player/Laser disc player/Video cassette recorder, etc.

Optional antenna connections

Use outdoor antennas if radio reception is poor.

A FM outdoor antenna

- Disconnect the FM indoor antenna.
- The antenna should be installed by a competent technician.

B AM outdoor antenna

Run a piece of vinyl wire horizontally across a window or other convenient location.

Leave the loop antenna connected.

Note

Disconnect the antenna when the unit is not in use.
Do not use the antenna during an electrical storm.

C Using other equipment

Listening to an external source

1 Press [INPUT SELECTOR] to select the external source.

Each time you press the button:

EH780

TUNER → CD → TAPE → VCR (EXT) → AUX (DVD)

EH680 EH580

TUNER → CD → TAPE → AUX

On the remote control

Press [VCR/AUX/6CH INPUT] (SC-EH780) or [AUX] (SC-EH680 and SC-EH580).

2 Operate the unit.

See the unit's manual for details on operation and connection.

EH780

To enjoy Dolby Digital and DTS

→ page 24

Recording an external source

1 Press [INPUT SELECTOR] to select the external source.

2 Select Dolby NR and reverse mode.

(→ page 28)

3 Press [● REC PAUSE].

4 Press [◀] or [▶] to start recording.

5 Start the source to be recorded.

See the unit's manual for details on operation and connection.

To stop recording

Press [■] on the deck.

To temporarily stop recording

Press [● REC PAUSE].

The deck goes into the recording standby mode.

To resume recording press [◀] or [▶] with the flashing indicator.

Recording onto an external unit


EH780

Connect the external unit to VCR (EXT) OUT.


Select the source to be recorded with [INPUT SELECTOR].

Start recording on the external unit and start playing the source to be recorded.

Tuner/amplifier

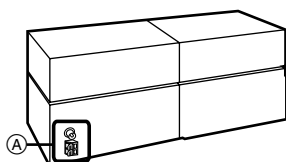


A For the United Kingdom and Eastern Europe

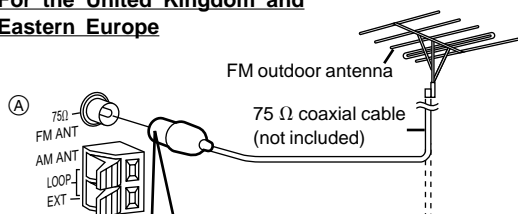


For the United Kingdom only

Use the antenna plug adaptor included.


For Australia and N.Z.

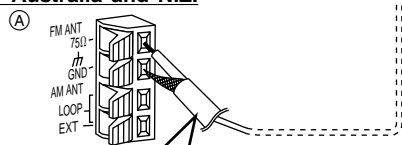


① Remove a piece of the outer vinyl.

 


 
② Twist the shield braid to expose the core wire.




B

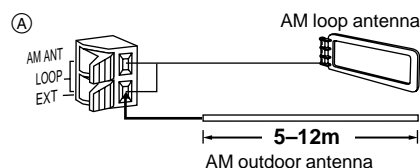

C

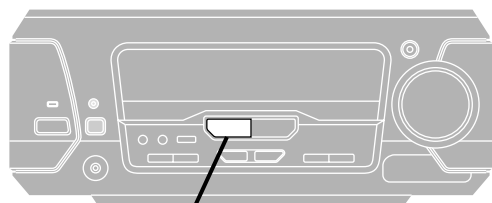 

1, 1 4 2 3

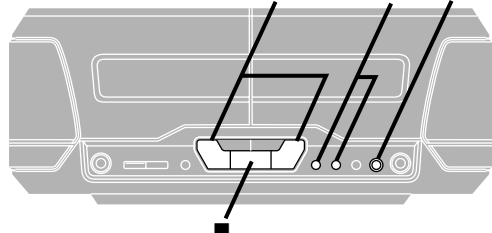

Troubleshooting guide

Before requesting service, make the below checks. If you can't fix the system as described below, or if something not listed here occurs, refer to the enclosed directory to locate an Authorized Service Center convenient to you or contact your dealer.

Reference pages are shown as black circled numbers ⑥.

Common Problems

No sound.	Turn the volume up. Switch off the unit, determine and correct the cause, then switch the unit on. Causes include shorting of the positive and negative speaker wires, straining of the speakers through excessive volume or power, and using the unit in a hot environment.
Sounds unfixed, reversed or come from one speaker only.	Check the speaker connections. ⑥
Humming heard during play.	An AC mains lead or fluorescent light is near the cables. Keep other appliances and leads away from this unit's cables. If possible in your area, turn the AC mains lead's plug or connector over to reverse the lead's polarity.
"ERROR" is displayed.	Incorrect operation performed. Read the instructions and try again.
"U70" is displayed.	Connect the flat cables firmly. If "U70" remains on the display, contact the dealer.
"F60" is displayed.	There is a problem with the amplifier. Consult your dealer.
"---:---" appears on the display.	You plugged the AC mains lead in for the first time or there was a power failure recently. Set the time. ⑬
The display starts up even after the unit is turned off.	The demonstration feature (–DEMO) is on. Turn it off if it is not required. ⑬

The CD changer or CD player

The display is wrong or play won't start.	The disc may be upside down. ⑧, ⑨ Wipe the disc. Replace the disc if it is scratched, warped, or nonstandard. Condensation may have formed in the changer or player due to a sudden change in temperature. Wait about an hour for it to clear and try again.
EH780 "TAKE OUT/DISC" appears on the display.	There is a problem with the CD mechanism. (A power failure may have occurred.) The tray will open automatically. Remove the CD from the tray, and after ensuring there is no CD in the tray, close it. The unit will make the disc changing noises for a few moments and then it should operate normally.

Listening to the radio

Noise is heard. The stereo indicator flickers or doesn't light. Sound is distorted.	Use an outdoor antenna. ⑭
A beat sound is heard.	Turn the TV off or separate it from the unit.
A low hum is heard during AM broadcasts.	Separate the antenna from other cables and leads.
The correct AM frequency can't be tuned in.	Change the frequency step. Hold [TUNER/BAND] down for 10 seconds to change the step to 9 kHz.

The cassette deck

Poor quality sound.	Clean the heads. 39 Check the Dolby NR setting. 19
Recording is not possible.	If the erasure prevention tabs have been removed, cover the holes with adhesive tape. 28
“DECK NO TAPE” is displayed during “One touch editing” .	Load a cassette into deck 2. 28
“DECK CHANGE TAPE” is displayed during “One touch editing”.	If the erasure prevention tabs have been removed, cover the holes with adhesive tape. 28

When there is a television set nearby

The picture on the TV disappears or stripes appear on the screen.	The location and orientation of the antenna are incorrect. If you are using an indoor antenna, change to an outdoor antenna. The TV antenna wire is too close to the unit. Separate the antenna wire of the TV set from the system.
---	--

The remote control

The remote control doesn’t work.	Check the batteries are inserted correctly. 12 Replace the batteries if they are worn.
----------------------------------	---

All components are required to service the system. If service is ever necessary, bring the entire system.

Maintenance

If the surfaces are dirty

To clean this unit, wipe with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

For a cleaner crisper sound

Clean the heads regularly to assure good quality playback and recording. Use a cleaning tape (not included).

Cassette tape selection and care

The unit can correctly play or record on the following types. It identifies the type automatically.

Normal position/TYPE I	✓
High position/TYPE II	✓
Metal position/TYPE IV	✓

- Tapes exceeding 100 minutes are thin and can break or get caught in the mechanism.
- Tape slack can get caught up in the mechanism and should be taken up before the tape is played.
- Endless tapes can get caught up in the deck’s moving parts if used incorrectly. Use tapes appropriate to this unit’s auto-reverse mechanism.

Technical specifications

SOUND PROCESSOR

■ EQ/SFP section

MANUAL GEQ

5-Band EQ EH780 EH580	
Center frequency	70/300/1 k/3.15 k/10 k Hz
Level control	±2.0, 4.0, 6.0 dB
3-Band EQ EH680	
Center frequency	70/1 k/10 k Hz
Level control	±2.0, 4.0, 6.0 dB

EQ/Space mode **EH780** **EH680**

4 modes HEAVY, CLEAR, SOFT, HALL

EQ mode **EH580**

3 modes HEAVY, CLEAR, SOFT

SUPER 3D AI EQ **EH780** **EH680**

3 modes AI EQ, SUPER 3D AI 1, SUPER 3D AI 2

■ Pre-amplifier section

Input sensitivity/impedance

VCR (EXT) EH780	250 mV/15 kΩ
AUX(DVD) EH780	250 mV/15 kΩ
AUX EH680 EH580	250 mV/15 kΩ

Output level **EH780**

VCR REC OUT 150 mV/1.5 kΩ

■ DOLBY PRO LOGIC section **EH780** **EH680**

PRO LOGIC mode SURROUND

CENTER mode NORMAL

DELAY TIME 20 ms (Fixed)

■ AV SURROUND section **EH780** **EH680**

AV surround mode

SUPER SURROUND (MUSIC, MOVIE)

■ DSP CONTROL section

DSP control mode SUPER SOUND EQ

EH780 **EH680** CENTER FOCUS

EH780 VIRTUAL REAR SURROUND

EH780 MULTI REAR SURROUND

EH780 SEAT POSITION

■ Spectrum analyzer section

Display mode NORMAL, PEAKHOLD, AURORA

■ General

Dimensions (W×H×D) **EH780** 293×89×270 mm

EH680 **EH580** 293×89×269 mm

Mass **EH780** 1.5 kg **EH680** **EH580** 1.4 kg

TUNER AMPLIFIER

■ Amplifier section **EH780**

Power output (L/R both channel driven)

Stereo Mode	
DIN 1 kHz THD 1 %/6 Ω (High)	2×25 W
100 Hz THD 1 %/8 Ω (Low)	2×45 W
RMS 1 kHz THD 10 %/6 Ω (High)	2×35 W
100 Hz THD 10 %/8 Ω (Low)	2×65 W

PRO LOGIC mode

DIN	
FRONT 1 kHz THD 1 %/6 Ω (High)	2×25 W
100 Hz THD 1 %/8 Ω (Low)	2×45 W
SURROUND 1 kHz THD 1 %/8 Ω	2×30 W
CENTER 1 kHz THD 1 %/8 Ω	60 W

RMS	
FRONT 1 kHz THD 10 %/6 Ω (High)	2×35 W
100 Hz THD 10 %/8 Ω (Low)	2×65 W
SURROUND 1 kHz THD 10 %/8 Ω	2×40 W
CENTER 1 kHz THD 10 %/8 Ω	80 W

PMPO 1 kHz/High 6 Ω, Low 8 Ω,

CENT. 8 Ω, SURR. 8 Ω 3000 W

Total harmonic distortion

Rated power at 1 kHz 1 % (6 Ω)

Half power at 1 kHz 0.1 % (6 Ω)

Load impedance

FRONT (High)	6 Ω
FRONT (Low)	8 Ω
SURROUND	8 Ω
CENTER	8 Ω

DIGITAL S. WOOFER

Center frequency 60 Hz

LEVEL (VOL -20 dB) MID +3 dB/MAX +6 dB

■ Amplifier section **EH680**

Power output (L/R both channel driven)

Stereo Mode	
DIN 1 kHz THD 1 %/6 Ω	2×60 W
RMS 1 kHz THD 10 %/6 Ω	2×80 W

PRO LOGIC mode

DIN	
FRONT 1 kHz THD 1 %/6 Ω	2×60 W
SURROUND 1 kHz THD 1 %/8 Ω	2×15 W
CENTER 1 kHz THD 1 %/8 Ω	30 W

RMS	
FRONT 1 kHz THD 10 %/6 Ω	2×80 W
SURROUND 1 kHz THD 10 %/8 Ω	2×20 W
CENTER 1 kHz THD 10 %/8 Ω	40 W

Total harmonic distortion

Rated power at 1 kHz 1 % (6 Ω)

Half power at 1 kHz 0.1 % (6 Ω)

Load impedance

FRONT	6 Ω
SURROUND	8 Ω
CENTER	8 Ω

■ Amplifier section **EH580**

Power output (L/R both channel driven)

DIN 1 kHz THD 1 %/6 Ω (High)	2×25 W
100 Hz THD 1 %/8 Ω (Low)	2×65 W
RMS 1 kHz THD 10 %/6 Ω (High)	2×35 W
100 Hz THD 10 %/8 Ω (Low)	2×85 W

Total harmonic distortion

Rated power at 1 kHz 1 % (6 Ω)

Half power at 1 kHz 0.1 % (6 Ω)

Load impedance

Main (High) 6 Ω

Main (Low) 8 Ω

DIGITAL S. WOOFER

Center frequency 60 Hz

LEVEL (VOL -20 dB) MID +3 dB/MAX +6 dB

■ FM tuner section

Frequency range

87.50-108.00 MHz

(0.05 MHz steps)

Sensitivity 1.8 μV (IHF usable)

S/N 26 dB 1.5 μV

S/N MONO 70 dB (75 dB, IHF)

Antenna terminal(s) 75 Ω (unbalanced)

■ AM tuner section

Frequency range

522-1629 kHz (9 kHz steps)

520-1630 kHz (10 kHz steps)

500 μV/m

Sensitivity (S/N 20 dB)

500 μV/m

■ Timer section

Clock Quartz-lock type

Function Play timer (1 time, daily),

Rec timer (1 time, daily),

Sleep (120 min, 30 min intervals)

Setting intervals (Play/Rec)

1 minute-23 hours 59 minutes (1 min intervals)

■ General

Power supply

(For the United Kingdom, Australia and N.Z.)

AC 230-240 V 50 Hz

AC 230 V 50 Hz

(For Eastern Europe)

Power consumption **EH780** 190 W **EH680** 170 W **EH580** 160 W

Standby 0.5 W

Dimensions (W×H×D) 293×118.5×345 mm

Mass **EH780** **EH680** 5.2 kg **EH580** 5.0 kg

CD PLAYER

■ Pickup

Wavelength 780 nm

■ General

Dimensions (W×H×D) **EH780** 293×89×288 mm

EH680 **EH580** 293×89×268 mm

Mass **EH780** 2.2 kg **EH680** **EH580** 1.6 kg

CASSETTE DECK

Deck system

Stereo cassette deck

Track system

4 track, 2 channel

Recording system

AC bias

Bias frequency

100 kHz

Erasing system

AC erase

Heads

Deck 1 (Playback head) Permalloy head

Deck 2 (Recording/Playback head) Permalloy head

(Erasing head) Double gap ferrite head

Motors

Deck 1, 2 Capstan drive DC servo motor

Tape speed 4.8 cm/s

Wow and flutter 0.16 % (WRMS)

Fast forward and rewind times

Approx. 110 seconds with C-60 cassette tape

Frequency response (Dolby NR off)

TYPE I (NORMAL) 20 Hz-16 kHz (DIN)

TYPE II (HIGH) 20 Hz-16 kHz (DIN)

TYPE IV (METAL) 20 Hz-16 kHz (DIN)

S/N (Signal level=max recording level, TYPE II type

tape) NR off 56 dB (A weighted)

Dolby B NR on 66 dB (A weighted)

Input sensitivity and impedance

REC (IN) 150 mV/23 kΩ

Output voltage and impedance

PLAY (OUT) 280 mV/360 Ω

■ General

Dimensions (W×H×D) 294×118.5×281 mm

Mass 2.1 kg

FRONT SPEAKER

Type 3 way, 3 speakers, Bassreflex

Speaker(s)

Super woofer **EH780** **EH580** 17 cm cone type

Woofer **EH780** **EH580** 12 cm cone type

EH680 17 cm cone type

Midrange **EH680** 12 cm cone type

Tweeter **EH780** 6 cm ring shaped dome type

EH680 **EH580** 6 cm cone type

Impedance **EH780** **EH580** High 6 Ω, Low 8 Ω

EH680 6 Ω

Input power (Music)

EH780 **EH580** High 60 W, Low 120 W

EH680 160 W

Output sound pressure level

EH780 **EH680** 87 dB/W (1.0 m)

EH580 84 dB/W (1.0 m)

Crossover frequency **EH780** 120 Hz, 4 kHz

EH680 3 kHz, 6 kHz

EH580 150 Hz, 4 kHz

Frequency range **EH780** 42 Hz-50 kHz (-16 dB)

46 Hz-36 kHz (-10 dB)

EH680 49 Hz-22 kHz (-16 dB)

56 Hz-20 kHz (-10 dB)

EH580 42 Hz-22 kHz (-16 dB)

46 Hz-20 kHz (-10 dB)

■ General

Dimensions (W×H×D) 240×412×259 mm

Mass 5.8 kg

CENTER SPEAKER **EH780**

Type 2 way, 3 speakers, Bassreflex

Speaker

Woofer(×2) 8 cm cone type

Tweeter 6 cm cone type

Impedance 8 Ω

Input power (Music) 160 W

Output sound pressure level 86 dB/W (1.0 m)

Crossover frequency 4 kHz

Frequency range 100 Hz-22 kHz (-16 dB)

115 Hz-20 kHz (-10 dB)

■ General

Dimensions (W×H×D) 190×99×166 mm

Mass 1.8 kg

CENTER SPEAKER **EH680**

Type 1 way, 1 speaker, Closed

Speaker

Full range 8 cm cone type

Impedance 8 Ω

Input power (Music) 70 W

Output sound pressure level 84 dB/W (1.0 m)

Frequency range 130 Hz-20 kHz (-16 dB)

150 Hz-18 kHz (-10 dB)

■ General

Dimensions (W×H×D) 140×99×118 mm

Mass 0.8 kg

SURROUND SPEAKER **EH780** **EH680**

Type 1 way, 1 speaker, Closed

Speaker

Full range 8 cm cone type

Impedance 8 Ω

Input power (Music) 70 W

Output sound pressure level 84 dB/W (1.0 m)

Frequency range 130 Hz-20 kHz (-16 dB)

150 Hz-18 kHz (-10 dB)

■ General

Dimensions (W×H×D) 140×99×118 mm

Mass 0.9 kg

Note

- Specifications are subject to change without notice.
- Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.
- "Low" and "High" stand for low frequency and high frequency.